

garmin  asus



Garmin-Asus A50
owner's manual



© 2010 Garmin Ltd. or its subsidiaries and ASUSTeK Computer Inc.

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin and ASUS. Garmin and ASUS hereby grant permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin and ASUS reserve the right to change or improve their products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Go to www.garminasus.com for current updates and supplemental information concerning the use and operation of this and other Garmin-Asus products.

The combined Garmin-Asus logo is a trademark

of Garmin Ltd. or its subsidiaries and ASUSTeK Computer Inc.

Garmin® is a trademark of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, Ciao!™, nüMaps Guarantee™, and are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin or ASUS is under license. Wi-Fi is a registered mark of the Wi-Fi Alliance. Adobe is a registered trademark of Adobe Systems Incorporated. Mac is a trademark of Apple Inc., registered in the U.S. and other countries. Microsoft, Exchange ActiveSync, Excel, Outlook, and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Google, Gmail, Panoramio, and Android are trademarks of Google Inc. Other trademarks and trade names are those of their respective owners.

Introduction

The Garmin-Asus A50 is a multi-media mobile phone with integrated navigation and services.

Getting Support

Go to www.garminasus.com for in-country support information.

Updating the Software

1. Go to www.garminasus.com/support.
2. Select your region.
3. Under the A50, click **Software Updates**.
4. Follow the on-screen instructions.

Buying Additional Maps

1. Go to www.garminasus.com/support.
2. Select your region.
3. Under the A50, click **Map Updates**.
4. Follow the on-screen instructions.

Getting Help

1. From the application tray, touch **Help**.
2. Touch a topic.

Table of Contents

Introduction	i	Using the On-screen Keyboard ...	13
Getting Support	i	About the Automatic Screen	
Updating the Software	i	Lock	14
Buying Additional Maps	i	About the Headset.....	15
Getting Help.....	i	Status and Notification Icons	16
Getting Started	1	Using the Phone	18
Device Features	1	Dialing a Number.....	18
Setting Up the Device.....	2	Calling a Found Location.....	18
Completing the Setup.....	5	Using In-Call Options.....	18
Getting to Know Your		Ending a Call	19
Device	6	Answering a Call.....	19
About the Keys	6	Silencing an Incoming Call	19
Using the Home Screen	7	Sending an Incoming Call to	
Using the Application Tray.....	8	Voice Mail.....	19
Viewing Notifications	9	Activating Call Waiting.....	20
Setting the Default Ringtone.....	9	Using Call Waiting	20
Customizing the Home Screen....	10	Setting Up Voice Mail	20
Changing the Volume	12	Calling Voice Mail	20
Rotating the Device	12	Using Call History	21
Using the Touchscreen	13	Placing a Conference Call.....	22
		Forwarding Calls.....	23
		Barring Calls.....	23

Turning On Airplane Mode.....	24	Setting Your Home Location.....	35
Multitasking.....	24	Finding an Address.....	36
Managing Your Contacts25		Finding Local Businesses.....	36
Adding a Contact.....	25	Finding Recently Found Locations.....	37
Adding a Number in Call History to Contacts.....	25	Finding Upcoming Events.....	37
Calling a Contact.....	25	Finding Panoramio™ Photos.....	38
Searching for a Contact.....	25	Finding Fuel Prices.....	38
Using the Contact Shortcut Menu.....	26	Finding Cities.....	39
Editing and Deleting Contacts.....	26	Using the White Pages Phone Directory.....	39
Starting a Route to a Contact.....	28	Entering Coordinates.....	40
Managing Your SIM Contacts.....	28	Finding Intersections.....	40
Searching for Locations30		About Extras.....	41
About GPS Signals.....	30	Following Your Route.....42	
Finding a Point of Interest.....	30	About the Map.....	42
Working with Found Locations.....	31	Using the Map.....	42
Changing the Search Area.....	32	About Usage Modes.....	43
Saving and Editing Locations.....	32	Navigating in Driving Mode.....	44
Sharing Locations.....	34	About Traffic.....	46
Finding Your Parking Spot.....	34	Navigating in Walking Mode.....	48
Finding Your Current Location.....	35	Taking a Detour.....	50

Stopping the Route.....	50	Adding a Friend to Contacts.....	63
Working with Routes.....	51	Sending a Message to a Friend ..	63
Viewing Your Trip Log.....	52	Starting a Route to a Friend's Location	63
Sending and Receiving		Removing an Invitation	64
Messages	53	Removing a Friend	64
Sending a Text Message	53	Hiding and Revealing Your Location	64
About Multimedia Messages	53	Viewing Ciao! Networks.....	64
Reading Messages.....	54	Disabling Ciao!	64
Setting Up SMS Cell Broadcast...	56	Browsing the Web	65
Using E-mail	57	Using the Browser	65
Using Ciao!™	61	Viewing Multiple Browser Windows	66
Registering Your Device and Joining Ciao!	61	Saving a Web Page to Favorites	67
Changing Your Display Name.....	62	Viewing Your History	67
Inviting a Friend	62	Sharing a URL.....	68
Accepting or Declining an Invitation.....	62	Opening a Web Site in a New Window	68
Sending a Location Update	62	Deleting a Web Site from a List...	68
Automatically Sending Location Updates.....	62		
Updating Your Status.....	63		
Viewing Friends	63		

Setting Your Browser Home Page.....	68	Viewing a Slideshow.....	76
Downloading Files.....	69	Sharing Pictures and Videos.....	76
Playing Music.....	70	Setting Your Wallpaper.....	77
Music Player File Types.....	70	Editing Pictures and Videos.....	77
Playing a Song.....	71	Adding a Picture to a Contact.....	77
Changing the Music Player View.....	71	Starting a Route to a Photograph or Video.....	78
About Playlists.....	71	Changing the Gallery Settings.....	78
Searching the Music Player.....	73	Organizing Your Life.....	80
Saving a Song as a Ringtone.....	73	Using the Calendar.....	80
Streaming Online Music.....	73	Viewing a Document.....	81
Taking and Viewing Pictures and Videos.....	74	Checking the Weather Forecast..	83
Taking a Picture.....	74	Using the Clock.....	83
Taking a Picture with GPS Information.....	74	Using the Converter.....	85
Recording a Video.....	75	Checking Flight Status.....	87
Changing the Camera and Video Settings.....	75	Finding Movie Times.....	88
Viewing Pictures.....	76	Connecting with Other Devices.....	89
Viewing a Video.....	76	Synchronizing Your Device with Your Computer.....	89
		Synchronizing Your Device with an Exchange Server.....	90

Synchronizing with a Google™ Account	90	Keyboard Settings	108
Using Bluetooth Technology	91	Date and Time Settings	108
Transferring Files	92	Units Settings	109
About Wi-Fi	93	Privacy Settings	109
Customizing Your Device	95	Clearing All User Data	110
Wireless Manager	95	Changing the Storage Settings..	110
Audio Settings	96	Viewing Software Information....	110
Display Settings	96	Appendix	111
Phone Settings	97	About Satellite Signals.....	111
Home Screen.....	98	About Connected Services	111
Navigation Settings.....	98	Battery Information	112
E-mail Account Settings.....	101	Mounting on Your Dashboard	113
Contacts Settings	102	Removing the Device, Cradle, and Mount	113
Calendar Settings	102	Resetting the Device	114
Messaging Settings	102	Caring for Your Device.....	114
Browser Settings	103	Specifications	115
Quick Search Settings	104	Troubleshooting	117
Managing Applications.....	105	Index	119
Accounts and Sync Settings.....	106		
Security and Location Settings..	106		
Changing the Text Language.....	108		

Getting Started

WARNING

See the *Important Safety and Product Information* document in the product box for product warnings and other important information.

NOTICE

To avoid unexpected data charges, it is strongly recommended that you obtain a data plan for this phone.

Device Features



①	Power key
②	Volume keys
③	Power connector for the navigation cradle
④	Camera key
⑤	Direction pad
⑥	Mini-USB connector

Setting Up the Device

1. Remove the battery cover (page 2).
2. Install the SIM card and optional microSD™ card (page 2).
3. Install the battery (page 2).
4. Replace the battery cover (page 3).
5. Charge the battery (page 3).
6. Register the device and check eligibility for a free map update (page 5).

Removing the Battery Cover

Slide the battery cover ① off the back of the device.



Installing the SIM and microSD Cards

1. Insert the SIM card ① in the holder with the gold contacts facing down and the notched corner toward the center of the device.



2. Insert the optional microSD card ② in the microSD slot with the gold contacts facing down.

Installing the Battery

1. Locate the battery that came in the product box.
2. Locate the metal contacts on the end of the battery and in the battery compartment.

3. Insert the battery ① with the Garmin-Asus logo facing up and the metal contacts on the battery aligned with the contacts in the battery compartment.



Replacing the Battery Cover

Slide the battery cover onto the back of the device until it clicks.

Charging the Battery

NOTICE

Your device will not charge if it has exceeded 140°F (60°C). If the device is mounted in the windshield, remove it from the mount and place it somewhere out of direct sunlight to allow the battery to charge.

To ensure optimal performance, you should charge the battery for at least four hours before using the device on battery power for the first time.

If you completely discharge the battery, recharge it for at least 20 minutes before turning on your device.

1. Insert the plug into the AC power adapter, if necessary.
2. Plug the USB cable into the AC adapter.
3. Connect the mini-USB end of the USB cable to the connector on the device.
4. Plug the AC adapter into a power outlet.

Alternate Charging Methods

There are several ways to charge the device in addition to the method described on [page 3](#).

- (Preferred) Use the vehicle power cable connected to the cradle, with the device in the cradle.
- Use the vehicle power cable connected to the device (not the cradle).
- Use the USB cable connected to a computer and your device.
- Use the battery charger accessory. For more information about accessories, go to www.garminasus.com.

Mounting Your Device

WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

1. Plug the vehicle power cable **①** into the power connector on the back of the cradle **②**.



2. Remove the clear plastic from the suction cup ③.
3. Clean and dry your windshield and the suction cup with a lint-free cloth.
4. Place the suction cup on the windshield.
5. Flip the lever ④ back, toward the windshield.
6. Snap the cradle onto the suction cup arm.
7. Fit the gold contacts on the left side of your device into the cradle.
8. Tilt the device back until it snaps into the cradle.
9. Plug the other end of the vehicle power cable into a power outlet in your vehicle.

Registering Your Device

1. Go to www.garminasus.com/support.
 2. Select your region, if necessary.
 3. Under the A50, click **Product Registration**.
 4. Follow the on-screen instructions.
- After registering, click **Maps** to see if you are eligible for one or more map updates.

Completing the Setup





Complete the following optional tasks to finish setting up your device:

- Set up voice mail ([page 20](#)).
- Set up an e-mail account ([page 57](#)).
- Synchronize the device ([page 90](#)).



Getting to Know Your Device

About the Keys

Key	Use
	Touch to open the phone. Touch to send a call.
	Touch to return to the Home screen. From the Home screen, touch to quickly switch panes. Touch and hold to open a menu of recently used applications.
	Touch to go back to the previous screen or to exit the current application.
	Touch to view a menu of options for the current screen or application.
Volume Up and Down	Press to increase or decrease the audio level.

Key	Use
Direction pad	Press up, down, left, or right to highlight items or to scroll through lists.
	Press the center of the directional pad to select a highlighted item.
Camera	Press to take a picture.
	Press to take a screenshot, when enabled.

Using the Home Screen



The Home screen is designed with several panes that can be customized.



- Drag ① toward the bottom of the screen to view notifications. The status bar displays notification icons, status icons, and the current time.
- Drag your finger across the screen ② to view the other Home screen panes.
- Touch any icon ③ on the Home screen to open the application.
- Touch ④ to open the phone application.
- Drag ⑤ toward the top of the screen to open the application tray ([page 8](#)).
- Touch ⑥ to view the Where To? pane.

Switching Home Screen Panes

Use any of the following options to switch to another pane:

- To switch to the next pane, slide your finger across the screen from right to left.
- To switch to the previous pane, slide your finger across the screen from left to right.
- To quickly switch to the Where To? pane, touch .
- To quickly switch to a specific pane, touch , and touch a pane.

About the Where To? Pane

The Where To? pane provides quick access to the navigation features of your device, such as the map, points of interest, and location search.

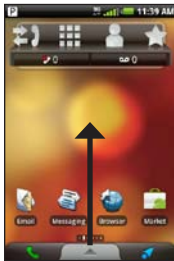
The Where To? pane is the far-left pane on the Home screen.

Using the Application Tray

The application tray contains shortcuts for the applications on the device.

NOTE: The application tray is available on all Home screen panes except for the Where To? pane.

1. From the Home screen, touch and drag the application tray toward the top of the screen.



2. Touch and drag to scroll through all of the shortcuts.

3. Touch a shortcut icon to start an application.

Viewing Notifications

When a notification icon appears in the status bar, open the notification window to view more information.

1. Touch and drag the status bar toward the bottom of the screen.

The notification window expands to fill the screen.


2. Touch an item to view more details or to go to the application.

Hiding the Notification Window


Touch and drag the bottom of the notification window to the top of the screen.

Setting the Notification Tone

You can select a tone that sounds when you receive a notification.

1. From the Home screen, touch  > **Settings** > **Audio and Display** > **Notifications**.
2. Touch a tone.
3. Touch **Save**.

Setting the Default Ringtone


1. From the Home screen, touch  > **Settings** > **Audio and Display** > **Phone Ringtone**.
2. Touch a ringtone.
3. Touch **Save**.

Customizing the Home Screen

You can customize the Home screen to suit your needs.

NOTE: You cannot customize the Where To? pane.

Changing the Home Screen Wallpaper

1. From the Home screen, touch  >
Wallpaper.
2. Select an option.
3. Select an image to use as the wallpaper (background).
4. Touch **Save** or **Set Wallpaper.**

About the Home Screen Items


You can add widgets, shortcuts, and folders to a pane. Widgets are small applications that are attached to a pane. Shortcuts provide quick access to applications or other items in your phone. You can use folders to organize shortcuts or other items on the Home screen.

Adding Items to a Pane

1. From the Home screen, switch to the pane to which you want to add items.
2. Touch and hold an empty area of the pane.
3. Touch the type of item to add.
4. If necessary, enter additional information.

Removing Items from a Pane

1. From the Home screen, switch to the pane from which you want to remove items.

2. Touch and hold the item to remove.
3. Drag the item to .

Adding Home Screen Folders

You can use folders to organize content on the Home screen.

1. From the Home screen, switch to the pane to which you want to add a folder.
2. Touch and hold an empty area of the pane.
3. Touch **Folders**.
4. Touch the type of folder that you want to add.
5. If necessary, enter a folder name, and touch **OK**.

You can drag a shortcut onto the folder to add the shortcut to the folder.

Renaming a Home Screen Folder

Before you can rename a folder, you must add a folder to the Home screen.

1. From the Home screen, touch the folder.
2. Touch and hold the folder name at the top of the folder window.
3. Enter the name, and touch **OK**.

Arranging Items on the Home Screen

You can move widgets, shortcuts, and folders to arrange them on the Home screen.



1. Touch and hold the item you want to move until the device vibrates.
2. Drag the item to a new location.
 - To move an item to an adjacent pane, drag the item to the edge of the screen, and hold it until the adjacent pane appears.
 - To move a shortcut into a folder, drag the shortcut onto the folder.



Changing the Volume

You can change the volume for certain features, such as the ringer, music player, navigation prompts, and messaging notifications.

1. Open the application for which you want to change the volume.
2. Press the **Volume Up** or **Volume Down** key.

TIP: You can also access the volume settings from the application tray. Touch **Settings** > **Audio and Display** > **Volume Levels**.


3. Select an option:
 - Continue pressing the **Volume Up** or **Volume Down** key to adjust the volume.
 - Touch  to quickly turn on the ringer, when available.
 - Touch  to set the ringer to vibrate, when available.

- Touch  to set the ringer to ring and vibrate, when available.
- Touch  to silence the ringer, when available.

Rotating the Device

NOTE: Some applications can be viewed in one orientation only. For example, the camera is available in landscape mode only.

Rotate the handset to alternate between vertical (portrait) mode and horizontal (landscape) mode.

TIP: To change the rotation settings, from the Home screen, touch  > **Settings** > **Audio and Display** > **Orientation**.








Using the Touchscreen

NOTE: The touchscreen requires direct contact with your skin. The device does not respond if you touch the touchscreen with your fingernail or with a glove.

- Touch and drag your finger to slowly scroll the screen.
- Scroll the screen both vertically and horizontally, when available.
- Touch, drag, and quickly remove your finger (flick the screen) to quickly scroll the screen.
- Touch the screen to stop scrolling.
- Touch two points near the center of the page, and drag your fingers apart to zoom in, when available.
- Touch two points near opposite edges of the page, and drag your fingers toward the center of the page to zoom out, when available.

Using the On-screen Keyboard

A keyboard appears when you need to enter text.

- Touch a key to enter text.
- Touch  to backspace.
- Touch  to shift.
- Touch and hold  to turn on caps lock.
- Touch  to close the keyboard.
- Touch  to display numbers and symbols.
- Touch  to display an alphabetic keyboard.
- Touch  to change the keyboard, if more than one keyboard is enabled ([page 108](#)).
- Touch the text or numbers on the screen to insert a cursor.

Using Text Completion

The device includes a text-completion feature that recognizes words you are typing.

NOTE: To adjust the text-completion settings, see [page 108](#).

1. Begin typing a word.

A row of suggested auto-text words appears above the keyboard. The closest match is highlighted.

2. Continue typing.

The text-completion words may change or disappear.

3. Touch a text-completion word to accept it.

NOTE: The highlighted word is inserted automatically when you enter a space or a punctuation mark.

Selecting an Input Method

The device includes multiple input methods, such as text editing and language-specific keyboards.

Before you can select an input method, you must enable additional input methods using the keyboard settings ([page 108](#)).

1. Touch and hold a text field.
2. Touch **Input Method**.
3. Select an option.

About the Automatic Screen Lock

The device automatically locks if you do not use it for a specified amount of time.


If the device is in the mount with external power, the screen will not automatically lock.

Manually Locking the Device


Press the **Power** key.

Unlocking the Device

To adjust the unlock settings, see [page 106](#).

1. Quickly press the **Power** key, if necessary.
2. Tap and drag  to the right.

Adjusting the Screen Timeout Length

1. From the Home screen, touch  > **Settings** > **Audio and Display** > **Screen Timeout**.
2. Select a time.
3. Touch **Save**.

About the Headset

You can use the wired headset (included in some packages) or a Bluetooth wireless headset to listen to audio and talk on the phone.

To connect a Bluetooth headset, see [page 91](#). For information on using a Bluetooth headset, see the instructions that came with the headset.

Connecting the Headset
















Connect the mini-USB headset connector to the audio-out connector on the device.

Using the Headset

- Press the button on the headset to answer a call.
- Speak into the adapter on the headset, which contains the microphone.
- Use the **Volume** knob to adjust the audio volume.



Status and Notification Icons

Icon	Description
	Current time. The time is supplied by your network provider based on the location of the device or on the selected time zone.
	Battery life.
	External power is connected, and the battery is charging.
	Mobile signal strength. The more colored bars that appear, the stronger the signal. A red bar indicates there is no mobile signal.
	Airplane mode.
	Wi-Fi® connectivity. This icon appears in place of the network connectivity icon when the device is using Wi-Fi.
	Bluetooth wireless technology is enabled, but no wireless device is connected.
	The A50 is connected to a device using Bluetooth® wireless technology.
	Teletypewriter (TTY) mode is activated (page 97).
	Hearing aid mode (HAC) is activated (page 97).
	Network connectivity. This icon appears when the device is connected for Internet access. The connection types are as follows: G—GPRS, E—Edge, 3G—3G, H—HSDPA 3.5G.
	GPS satellite strength (page 30). The more colored bars that appear, the stronger the satellite signal. A red "X" indicates no satellite signals.
	Vibrate mode.

Icon	Description
	Silent mode.
	Speaker phone.
	In a phone call.
	Calls are being forwarded.
	Text or MMS message received.
	E-mail message received.
	Appointment reminder.
	New voice mail message.
	Parking spot has been saved.
	You are currently navigating a route in driving mode.
	You are currently navigating a route in walking mode.
	An alarm is enabled.
	Connected to the computer using the USB cable.
	Synchronizing data with your computer, e-mail account, or Exchange ActiveSync account.
	There is an error synchronizing data.


Using the Phone

Dialing a Number

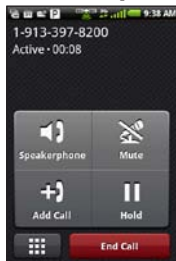
1. Touch  > .
2. Dial the number.
3. Touch **Call**.

Calling a Found Location

You can call a location that you have found in the Where To? menu if the location has a phone number associated with it.


1. From the Home screen, touch .
2. Find a location ([page 30](#)).
3. Touch **Call**.

Using In-Call Options



While you are in a call, use the following options:


- Touch **Speakerphone** to activate the speakerphone.
- Touch **Audio** to select the audio output when a wireless hands-free device is connected ([page 91](#)).
- Touch **Mute** to mute the audio input.

- Touch **Add Call** to place a new call.
The first call is placed on hold:
 - Touch **Switch** to change between the current call and the call on hold, if you are on call waiting.
 - Touch **Merge** to create a conference call.
- Touch **Hold** to place the current call on hold.
- Touch  to display a numeric keypad for automated systems that require numeric entries.

Ending a Call

Touch **End Call**.

Answering a Call


- If the screen is locked, drag  to the right.
- If the screen is unlocked, touch **Answer**.

Silencing an Incoming Call


When you receive a call, press the **Volume Up** or **Volume Down** key.

Sending an Incoming Call to Voice Mail

There are a few ways to send an incoming call to voice mail.

- Press the **Power** key.
- If the screen is locked, drag  to the left.
- If the screen is unlocked, touch **Ignore**.

Activating Call Waiting




From the Home screen, touch 
> **Settings** > **Phone** > **Call Waiting**
> **On** > **Save**.

Using Call Waiting


If call waiting is activated, use these call waiting options when you receive an incoming call.

- Touch **Answer + Hold** to answer the new call and place the original call on hold:
 - Touch **Merge** to create a conference call with the original call and the new call.
 - Touch **Switch** to switch between the original call and the new call.
- Touch **Answer + End** to answer the new call and end the original call.
- Touch **Ignore** to send the new call to your voice mail.


Setting Up Voice Mail

1. From the Home screen, touch 
> **Settings** > **Phone** > **Voice Mail Number**.
2. Verify that your voice mail number is correct.
3. Touch  > .
4. Touch and hold **1**.
5. Follow the voice prompts.

Calling Voice Mail

When you have new voice mail,  appears in the status bar.




1. Touch and drag the status bar toward the bottom of the screen.
2. Touch **New Voice Mail**.

TIP: You can also touch **Call** >  > **1** to call your voice mail.

Using Call History



1. Touch  > .

Calls are organized into three categories:

Icon	Description
	Dialed call
	Received call
	Missed call

2. Touch a call.
3. Select an option.




Calling a Number using Call History

1. Touch  > .
2. Touch  next to the number or contact.

Deleting a Call from the Call History

1. Touch  > .
2. Touch a call.
3. Touch  > **Delete from Call History** > **OK**.

Adding a Number in Call History to Contacts

1. Touch  > .
2. Touch a call.
3. Touch  > **Add to Contacts** > **Create new contact**.
4. Touch a phone type.
5. Touch **Name**, enter a name, and touch **Next**.
6. If necessary, enter more contact information.
7. Touch **Save**.

Viewing Related Calls

Related calls are calls made to or received from the same number, which is displayed as one item in the call history.

1. Touch  > .
2. Touch a call.
3. Touch  > **View Related Calls**.


A list of related calls appears showing the length of each call or a status message.

Using Reverse Lookup

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

A reverse lookup allows you to search for the address of a phone number that called you.

1. Touch  > .

2. Touch a call.
3. Touch  > **Reverse Lookup**.

Deleting All Calls from the Call History


Touch  >  >  > **Clear Call Log**.

Placing a Conference Call

You can host a conference call with two other callers.



TIP: If you receive a call while you are already on another call, you can start a conference call by touching **Merge**.

1. Place a call to the first phone number.
2. Touch **Add Call**.
3. Place a call to the second phone number.
4. Touch **Merge**.


5. Touch  to view the other members of the conference call (optional).

Speaking Privately During a Conference Call

You can speak privately with another member of the conference call.


1. During the conference call, touch .
2. Touch  next to the contact with whom you would like to speak.
The other members of the conference call can continue to speak to each other.
3. Touch **Merge** to end the private conversation.

Forwarding Calls

1. From the Home screen, touch  > **Settings** > **Phone** > **Call Forwarding**.
2. Select a forwarding option.
3. Enter a number to forward calls to.


Barring Calls

Before you can bar incoming calls and outgoing calls, you must obtain the call-barring password from your service provider.

1. From the Home screen, touch  > **Settings** > **Phone** > **Call Barring**.
2. Touch a call type.
3. Select an option.
4. Touch **Save**.
5. Enter the call-barring password.
6. Touch **OK**.

Turning On Airplane Mode

Airplane mode turns off the phone and data connections for situations such as an airplane flight.



From the Home screen, touch  > **Settings** > **Wireless Manager** > **Airplane Mode**.

When Airplane mode is on, the telephone, the network, and Bluetooth features are deactivated. You cannot send or receive calls, e-mail messages, or SMS/MMS messages.

Multitasking


Use the keys to help you multi-task.

Placing a Call While Navigating



1. If you are driving, pull over and stop.
2. Touch , and place the call.
3. Touch  to return to the map.

4. Carry on your conversation using the speakerphone.

Answering a Call While on the Web

1. While browsing the Internet, touch **Answer** when the phone rings.
2. Touch  to return to the browser.
3. Carry on your conversation using the speakerphone.

Placing a Call While on the Web


1. While browsing the Internet, touch , and place the call.
2. Touch  to return to the browser.
3. Carry on your conversation using the speakerphone.

Ending a Call While Multitasking




To hang up, touch  > **End Call**.

Managing Your Contacts



Adding a Contact

1. From the application tray, touch **Contacts** > .
2. Enter the contact information.
3. Touch **Save**.


Adding a Number in Call History to Contacts

1. Touch  > .
2. Touch a call.
3. Touch  > **Add to Contacts** > **Create new contact**.
4. Touch a phone type.
5. Touch **Name**, enter a name, and touch **Next**.
6. If necessary, enter more contact information.
7. Touch **Save**.

Calling a Contact

1. Touch  > 
TIP: You can also open **Contacts** using the application tray.
2. Touch a contact.
3. Touch **Call**.
4. If the contact has more than one phone number, touch the phone number to call.

Searching for a Contact

1. From the application tray, touch **Contacts** > .
2. Enter part of the contact name.
3. Touch the contact.

Using the Contact Shortcut Menu

1. From the application tray, touch **Contacts**.
2. Touch the contact image.





A shortcut menu opens, which provides quick access to commonly used items relating to contacts.


3. Touch an icon.

Editing and Deleting Contacts

Editing a Contact




1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit**.
4. Edit the contact:
 - Touch an item to edit the information.
 - Touch  to delete the information.
5. Touch **Save**.

Adding a Picture for a Contact


1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit**.
4. Touch the picture of the contact.

5. Select an option: **Take a Photo** or **Select Photo from Gallery**.
6. Take or choose a picture.
7. Touch and drag the square to crop the picture, and touch **Save**.
8. Touch **Save**.


Assigning a Location to a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Edit** > **Add Address** > .
4. Select the location:
 - Touch the location on the map.
 - Touch , and search for the location.
5. Touch **Select this Location** > **Save**.

Setting a Ringtone for a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch **More Info** >  > **Contact Options** > **Ringtone**.
4. Touch a ringtone.
5. Touch **Save**.

Sending all Calls from a Contact to Voice Mail

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch **More Info** >  > **Contact Options**.
4. Select the **Incoming Calls** check box.

Deleting a Contact

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch  > **Delete** > **OK**.


Starting a Route to a Contact

Before you can start a route to a contact, you should assign a location for the contact ([page 27](#)).

1. From the application tray, touch **Contacts**.
2. Touch a contact.
3. Touch **Go!**.

Managing Your SIM Contacts

Importing Contacts from Your SIM Card

1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **Import Contacts from SIM**.
3. Touch a method to import contacts:
 - Touch **Import All Contacts**.
 - Select the check box for the contact.
4. Touch **Import**.


Exporting Contacts to Your SIM Card

1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **Export Contacts to SIM**.
3. Touch a method to export contacts:
 - Touch **Export All Contacts**.


- Select the check box for the contact.

4. Touch **Export**.

Creating a New SIM Contact



1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **View SIM Contacts** > **Create New SIM Contact**.
3. Touch **Name**, enter the name, and touch **Done**.
4. Touch **Primary Number**, enter the phone number, and touch **Done**.
5. Touch **Done**.

Call or Send a Message to a SIM Contact



1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **View SIM Contacts**.
3. Touch a contact.

4. Touch **Call** or **Send Message**.

Editing Contacts on Your SIM Card

1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **View SIM Contacts**.
3. Touch a contact.
4. Touch  > **Edit**.
5. Edit the information as needed.
6. Touch **Done**.

Deleting Contacts on Your SIM Card

1. From the application tray, touch **Contacts**.
2. Touch  > **SIM Phone Book** > **View SIM Contacts**.
3. Touch a contact.
4. Touch  > **Delete** > **OK**.

Searching for Locations

The Where To? menu provides several different categories you can use to search for locations and destinations.

About GPS Signals

Before you can navigate or use location-based applications, your device must acquire satellite signals.

When you start an application that requires GPS signals, the device begins acquiring satellite signals. Acquiring satellite signals can take a few minutes.


TIP: If you are having difficulty acquiring satellite signals, go outdoors to an open area, away from tall buildings and trees.

For more information on GPS satellite signals, see [page 111](#) and [page 117](#).



Finding a Point of Interest

The detailed maps loaded in your device contain points of interest, such as restaurants, hotels, and auto services.

Finding a Point of Interest by Category

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places**.
3. Touch a category.
4. Touch a subcategory, if necessary.
A list of items near your current location appears.
5. Touch a location.

Finding by Spelling the Name

1. From the Home screen, touch  to view the Where To? pane.
2. Touch the text entry field.
3. Enter part or all of the location name, and touch .
4. Touch a location.

Working with Found Locations

After you find a location, the location appears on the map. An information balloon displays the name of the location.



- Touch ① to view the other locations on the map.
- Touch ② to view additional details, such as the address and the phone number, if known.
- Touch ③ to create a route to the location.
- Touch ④ to dial the phone number of the location, if available.


Starting a Route to a Location

1. Find a location ([page 30](#)).
2. Touch **Go!**.
3. Touch a navigation mode, if necessary.


Calling a Location

1. Find a location ([page 30](#)).
2. Touch **Call**.

Finding a Nearby Location

 


1. Find a location ([page 30](#)).
2. Touch  > **Search Near**.
3. Select an option.

Adding a Location to Contacts

1. Find a location ([page 30](#)).
2. Touch the information balloon.
3. Touch  > **Add to Contacts**.
4. Select an option.

Changing the Search Area

By default, your device finds locations near your current location.

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places** >  > **Change Location**.
3. Select the location:
 - Touch the location on the map.
 - Touch , and search for the location.


4. Touch **Select this Location**.

Saving and Editing Locations

Saving a Found Location


1. Find a location ([page 30](#)).
2. Touch the information balloon.
3. Touch **Save**.

Saving Your Current Location

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **View Map**.
3. Touch the vehicle icon.
4. Touch **Save**.
5. Enter a name, and touch **Done**, if necessary.


Finding Saved Locations

To save a location, see [page 32](#).

 
1. From the Home screen, touch  to view the Where To? pane.

2. Touch **Browse Places > Saved Locations**.
3. Touch the left or right arrow to search different categories, if necessary.
4. Touch an item.

Editing Saved Locations

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Saved Locations**.
3. Touch and hold a location.
4. Touch **Edit**.
5. Touch an item to edit it.
6. Touch **Save**.


Deleting a Saved Location

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Saved Locations**.
3. Touch and hold a location.

 
4. Touch **Delete > Confirm**.

Creating Categories

When you save a location, it is automatically assigned to a category. You can create your own categories to help organize your saved locations.

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Saved Locations**.
3. Touch and hold a location.
4. Touch **Edit > Categories > Enter New Category**.
5. Enter a name for the category, and touch **OK**.
6. Touch **Done > Save**.

Assigning Saved Locations to Categories

1. From the Home screen, touch  to view the Where To? pane.

2. Touch **Browse Places > Saved Locations**.
3. Touch and hold a location.
4. Touch **Edit > Categories**.
5. Touch the categories to assign to this location.
6. Touch **Done > Save**.

Sharing Locations

Sharing a Found Location

1. Find a location ([page 30](#)).
2. Touch the information balloon.
3. Touch **Share**, and select an option to send the location.
4. Touch **To**, add a recipient, and touch **Done**.
5. Touch **Message**, enter a message, and touch **Done**.
6. Touch **Send**.

Sharing Your Current Location

1. From the application tray screen, touch **Where Am I?**.
2. Touch **Share**.
3. Select an option to send the location.
4. Touch **To**, add a recipient, and touch **Done**.
5. Touch **Message**, enter a message, and touch **Done**.
6. Touch **Send**.

Finding Your Parking Spot

About the Parking Spot Feature

When the My Parking Spot feature is enabled, the location of your parking spot is saved automatically if you are receiving satellite signals when you remove the device from the cradle.

When your parking spot is saved, **[P]** appears in the status bar.

Starting a Route to Your Parking Spot

1. Touch and drag the status bar toward the bottom of the screen.

TIP: You can also access your Parking Spot from **Browse Places > Saved Locations**.

2. Touch **Saved Parking Spot > Go!**.

Finding Your Current Location


Use the Where Am I? page to view information about your current location. This is a helpful feature if you need to tell emergency personnel your location.

1. From the application tray, touch **Where Am I?**.
2. Touch the information balloon to open the Where Am I? page to view your location coordinates and nearby items, such as fuel stations.

TIP: You can also open the Where Am I? page by touching the vehicle icon on the map.


Setting Your Home Location

You can save a home location and quickly generate a route to it.

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Home**.
3. Select an option.

 
Starting a Route to Your Home

Before you can create a route to your home location, you must set your home location.

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Home > Go!**.

Finding an Address



NOTE: Depending on the version of the built-in map data on your device, the button names and the order of steps could be different than the following steps.

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Address**.
TIP: To change the search area, touch **Change State/Country**, and touch a state, province, or country.
3. Touch **Enter House Number**, enter the house number, and touch **Next**.
4. Enter all or part of the street name or number, and touch **Done**.
5. Touch the street, if necessary.
6. Enter or touch the correct city, if necessary.
7. Touch the correct address, if necessary.

Finding Local Businesses


Local search enables you to search for local businesses. In addition to searching by spelling the name of a location, you can also spell the names of categories, like “salon” or “coffee.”

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.



1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Local Search**.
3. Enter your search term, and touch .
4. Touch an item.

Finding Recently Found Locations

Your device stores the last 50 locations you have found.

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Recently Found**.
3. Touch a location.

Clearing the Recently Found List


1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Recently Found**.
3. Touch  > **Clear > OK**.

The list of recently found locations is cleared. These locations are not deleted from the map data.

Finding Upcoming Events

Search for upcoming events, such as art shows and sporting events.

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

 
1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Upcoming Events**.
3. Touch a category.
4. Touch the arrows or the date to select a different date, if necessary.
5. Touch an event to view more information.
6. Select an option:
 - If the event begins within two hours, touch **Go!** to navigate to the event.

- If the event begins in more than two hours, touch **Remind Me!** to add the event as an appointment on your calendar.

Finding Panoramio™ Photos

Panoramio photographs contain information about the location where the photograph was taken. You can use this information to navigate to locations and landmarks shown in Panoramio photographs.

This service is not available in all areas. A data connection is required for this feature.


1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places** > **Panoramio**.

A list of photographs from nearby locations appears.

3. Touch a photograph.

 

Finding Fuel Prices

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.



1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places** > **Fuel Prices**.

A list of fuel prices near your current location appears.

Changing the Fuel Type

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places** > **Gas Prices**.
3. Touch , and select a fuel type.

 
Finding Cities

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Cities**.
3. Enter the name, and touch **Done**.
TIP: To view a list of nearby cities, touch  > **Nearby Cities**.
4. Touch a city.

Using the White Pages Phone Directory

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.


Finding by Name

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > White Pages > By Name**.

3. Enter all or part of the last name, and touch **Next**.
4. Enter all or part of the first name (optional), and touch **Done**.
5. Touch **Search**.
6. Enter the postal code, if necessary.

 
Finding by Phone Number

This service may not be available for all phone numbers.

 

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > White Pages > By Phone Number**.
3. Enter the area code and phone number.
4. Touch **Search**.

Entering Coordinates

If you know the geographic coordinates of your destination, you can use your device to navigate there. This can be especially helpful when geocaching.


1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Coordinates**.
3. Touch a cardinal-direction button to change the direction.
4. Touch a field to enter the latitude and longitude data.
5. Touch **View Map**.

Changing the Map Coordinate Format

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Coordinates >  > Coordinate Format**.

3. Touch a format.

Finding Intersections

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Intersections**.
3. If necessary, touch **Change State/ Country** to change the state, country, or province.
4. Touch **Enter Street 1**.
5. Enter all or part of the street name.
6. Touch the correct street.
7. Repeat for the second street.
8. Touch the correct intersection, if necessary.


About Extras

You can download additional content, such as custom POIs, from www.garminasus.com.

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

You can create or download custom POI lists and install them on your device using POI Loader software available at www.garminasus.com. See the POI Loader Help file for more information.

Finding Extras

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **Browse Places > Extras**.
3. Touch a category.


Following Your Route

Before you can navigate with your device, you must acquire satellites (page 30).


About the Map

NOTICE



The speed-limit icon feature is for information only and does not replace the driver's responsibility to abide by all posted speed-limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.






From the Home screen, touch  > **View Map** to display your current location. The vehicle icon displays your position on the map. A speed-limit icon may appear as you travel on major roadways.

Using the Map

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **View Map**.
3. Touch anywhere on the map.



- Touch and drag to view different parts of the map.
- Touch  and  to zoom in and out.

- As you zoom out, the map changes to a digital elevation map showing the contours of the area.
- Zoom far out to view a globe. Touch and drag to spin the globe.
- Touch  to rotate the map.
- Touch  to view the map in two dimensions.
- Touch  to view the map in three dimensions.
- Touch  to center the map on your location.
- Touch anywhere on the map. An arrow points to the location.
- Touch  for more options.

NOTE: You can only see detailed map information for areas for which you have maps loaded on your device.

About Usage Modes


You can navigate to a destination in Driving mode or in Walking mode. The navigation tools vary slightly based on your usage mode.

In Driving mode, your device calculates routes for automobiles. These routes obey traffic rules, such as for one-way streets. Your device uses typical automobile speeds when estimating your arrival time.

In Walking mode, your device calculates routes for walking. These routes avoid highways in favor of smaller streets. Your device uses typical walking speeds when estimating your arrival time. If you have cityXplorer™ maps installed, your device may include public transit systems in walking routes.

Navigating in Driving Mode

Starting a Route in Driving Mode

1. From the Home screen, touch  to view the Where To? pane.
2. Find a location ([page 30](#)).
3. Touch **Go!** > **Driving**.

NOTE: When the device is in the mount, **Driving** is automatically selected.

The device creates a route to the location and opens the map.

Using the Map to Navigate in Driving Mode

Your route is marked with a magenta line.

As you travel, your device guides you to your destination with voice prompts, arrows on the map, and directions at the top of the map.

If you deviate from the original route, your device recalculates the route and provides new directions.



- Touch ① to view the next turn.
- Touch ② to view the route details.
- Touch ③ to view the Traffic menu, when available. Traffic services require an additional subscription and data plan charges.
- Touch ④ to open the Where Am I? page.
- Touch ⑤ to view the trip computer.

Viewing the Route Details

When you are navigating in Driving mode, you can view all of the turns for your entire route and the distance between turns.

1. While navigating to a destination, touch the text bar on the top of the map.



2. Touch a turn on the list to view details for the turn.

Viewing the Entire Route on the Map

1. From the map, touch the text bar on the top of the screen.
2. Touch **View Map**.

The map appears with your route marked with a magenta line.

Viewing the Next Turn

When you are navigating in Driving mode, you can view the turn on the map and the distance and time left before you reach the turn.

1. While navigating to a destination, touch the turn indicator on the map.



2. Touch the arrows to see more turns in the route.

Viewing the Trip Computer in Driving Mode


The trip computer displays a compass, your current speed, and other helpful statistics about your trip.

While you are navigating in Driving mode, from the map, touch **Speed**.




Resetting the Trip Computer in Driving Mode

Reset the trip computer before beginning a trip.

1. While you are navigating in Driving mode, from the map, touch **Speed** > .
2. Touch an item to reset.

Avoiding Road Features

1. From the Home screen, touch  > **Settings** > **Navigation** > **Avoidances**.
2. Select the check boxes to mark the road features to avoid.


About Traffic

This service is not available in all areas. This service may be available as a paid subscription. A data connection is required for this feature. Your regular data usage charges apply.

NOTE: Garmin and ASUS are not responsible for the accuracy of the traffic information.

Turning on Traffic

Before you can receive traffic information, you must turn on background data.

1. From the Home screen, touch  > **Settings** > **Navigation**.
2. Select the **Background Data** check box.

About the Traffic Icon

The traffic icon on the map changes color to indicate the severity of traffic conditions.

Icon	Definition
Gray	Traffic information is not available.
Green	Traffic is flowing freely.
Yellow	Traffic is moving but there is a delay. There is moderate traffic congestion.
Red	Traffic is not moving or is moving very slowly. There is a severe delay.

Traffic on Your Route


When calculating your route, the device examines the current traffic and automatically optimizes the route for the shortest time. If a severe traffic delay occurs on your route while you are navigating, the device automatically recalculates the route. You might still be routed through traffic if no better alternative routes

exist.


If a non-severe traffic delay occurs on your route, the traffic icon displays how much time the delay has added to your route. This time is already included in your estimated arrival time.

Avoiding Traffic Automatically

You can enable the device to automatically avoid traffic.

1. From the Home screen, touch  > **Settings** > **Navigation** > **Avoidances**.
2. Select the **Traffic** check box.

Manually Avoiding Traffic on Your Route

1. While you are navigating in Driving mode, from the map, touch the traffic icon.
2. Touch **Traffic On Route**.
3. Touch the arrows to select a traffic delay, if necessary.
4. Touch  > **Avoid** to avoid the selected traffic delay.

You might still be routed through traffic if no better alternative routes exist.

Viewing the Traffic Map

The traffic map displays color-coded traffic flow and delays on nearby roads.

To return to the normal map, touch the traffic icon, and touch **Show Normal Map**.

 
1. On the map, touch the traffic icon.
2. Touch **Show Traffic Map**.

Viewing Traffic Delays

1. On the Map page, touch the traffic icon.
2. Touch **Traffic Search** to view a list of traffic delays.
3. Touch an item to view the delay on a map and details about the delay.
4. If there is more than one delay, touch the arrows to view the additional delays.

Navigating in Walking Mode

Starting a Route in Walking Mode

1. From the Home screen, touch  to view the Where To? pane.
2. Find a location ([page 30](#)).
3. Touch **Go!** > **Walking**.

NOTE: The device must be out of the mount to be able to select **Walking**.

The device creates a route to the location and opens the map.


Using the Map to Navigate in Walking Mode

Your route is marked with a magenta line.




- Touch ① to view the next turn or previous turn.
- Touch ② to view the itinerary page.
- Touch ③ to view the Where Am I? page.

Viewing the Itinerary Page

While navigating a route in Walking mode, touch  > View Itinerary.

Using the Compass to Navigate

1. From the Map page, touch  > Trip Computer.

 


As you travel, the compass rotates to indicate your direction of travel.

2. Move in a circle until the arrow points at the bug indicator.

The bug indicator is the inverted triangle at the top of the compass, which indicates your current heading.



3. Continue traveling in this direction, toward your destination.

Calibrating the Compass

1. From the Home screen, touch  to view the Where To? pane.
2. Touch **View Map** >  > **Trip Computer** >  > **Calibrate Compass**.
3. Follow the on-screen instructions.

Resetting the Trip Computer in Walking Mode

Reset the trip computer before beginning a trip.

1. From the Home screen, touch **View Map** >  > **Trip Computer** > .
2. Touch an item to reset.

Taking a Detour


While navigating a route, you can use detours to avoid obstacles ahead of you, such as construction zones.

1. While navigating a route, touch .

2. Touch and drag the status bar toward the bottom of the screen. The notification window opens.
3. Select an option:
 - Touch **Detour** when in Driving mode.
 - Touch **Recalculate** when in Walking mode.



If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

Stopping the Route


1. While navigating a route, touch .
2. Touch and drag the status bar toward the bottom of the screen. The notification window opens.
3. Touch **Stop**.

Working with Routes

Adding Points to the Active Route




1. While navigating a route, touch .
2. From the Home screen, touch  to view the Where To? pane.
3. Find a location ([page 30](#)).
4. Touch the intermediate destination.
5. Touch **Go!** > **Insert Via Point**.

Planning a New Route


1. From the application tray, touch **Routes** > **Create New Route**.
2. Touch the text field, and enter a route name.
3. Touch **Add Location**.
4. Select the location:
 - Touch the location on the map.
 - Touch , and search for the location.
5. Touch **Select this Location**.

6. Repeat steps 3–5 as necessary.
7. Touch **Save**.


Editing a Route

1. From the application tray, touch **Routes**.
2. Touch a route.
3. Touch **Edit**.
4. Edit the route:
 - Touch **Add Location** to add more locations.
 - Touch and drag  or  to move the location down or up in the route.
 - Touch  to delete a location.

Optimizing and Reversing a Saved Route

1. From the application tray, touch **Routes**.
2. Touch a route.
3. Touch **Edit** > .
4. Touch **Optimize Route** or **Reverse Route**.
5. Touch **Save**.

Deleting a Saved Route


1. From the application tray, touch **Routes**.
2. Touch a route.
3. Touch **Edit** >  > **Delete Route** > **OK**.

Starting to Navigate a Saved Route

1. From the application tray, touch **Routes**.
2. Touch a route.
3. Touch **Go!**.



Viewing Your Trip Log

You can record the path you travel (called a trip log) and display it as a dotted line on the map.

1. From the Home screen, touch  > **Settings** > **Navigation**.
2. Select the **Trip Log** check box for the Automobile and/or Pedestrian settings.

The trip log appears on the map.

Clearing the Trip Log


From the Home screen, touch  > **Settings** > **Navigation** >  > **Clear Trip Log**.

Sending and Receiving Messages

Your regular messaging fees apply when sending and receiving messages.

Sending a Text Message


You can send Short Message Service (SMS) text messages.

1. From the application tray, touch **Messaging > New Text Message**.
2. Enter a phone number or a contact name, and touch a recipient.
3. Enter the text message.
4. Touch  for additional options.
5. Touch **Send**.

About Multimedia Messages

A multimedia (MMS) message is similar to a text message, but it includes an attachment, such as a photo, a video, a contact, or a calendar event.

Sending an MMS



1. From the application tray, touch **Messaging > New Text Message**.
2. Enter a phone number or a contact name, and touch a recipient.
3. Enter the text message.
4. Touch  > **Attach**.
5. Touch a media type.
6. Touch the file to attach.
7. Touch **Send**.

Sending a Location Message

CAUTION


Use caution when sharing your location information with others.

Location messages allow you to send your current location information to other people.

1. From the application tray, touch **Messaging** > **New Text Message**.
2. Enter a phone number or a contact name, and touch a recipient.
3. Enter the text message.
4. Touch .
5. Select the location:
 - Touch the location on the map.
 - Touch , and search for the location.
6. Touch **Select this Location**.
7. Touch **Send**.

Reading Messages

A number on the Messaging icon displays the number of unread messages in your inbox.

1. From the Home screen, touch **Messaging**.
The inbox opens, containing SMS and MMS messages received from other devices.
Unread messages are displayed in bold.
2. Touch a message to read it.
TIP: Touch and hold a message to view more options.
3. Touch  for more options.

Replying to a Message

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch the data-entry field.
4. Enter a message.
5. Touch **Send**.


Forwarding a Message

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch and hold a message in the thread.
4. Touch **Forward**.
5. Enter a phone number or a contact name, and touch a recipient.
6. Touch **Message** to edit the message, if necessary.
7. Touch **Send**.

Deleting a Message


1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch and hold a message in the thread.
4. Touch **Delete Message**.

Deleting a Thread

1. From the Home screen, touch **Messaging**.
2. Touch a message.
3. Touch  > **Delete Thread**.



Setting Up SMS Cell Broadcast

If SMS Cell Broadcast is supported by your service provider and region, you can receive text messages that are broadcast to multiple subscribers in the area.

1. From the Home screen, touch  > **Settings > Messaging**.
2. Select the **Cell Broadcast Service** check box.
3. Touch **Select Language**, select the language you want to receive messages in, and touch **Save**.
4. Touch **Manage Channels**.
5. Select the **Receive Channel List** check box.
6. Select the channels you want to receive.

TIP: You can also add a channel that does not appear in the list.

Adding a New Channel

1. From the Home screen, touch  > **Settings > Messaging > Manage Channels**.
2. Touch .
3. Touch the **Channel Number** field, and enter the channel number.
4. Touch the **Description** field, and enter a description for the channel.
5. Touch the **Note** field, and enter a note about the channel.
6. Touch **Save**.

About Cell Broadcast Messages

When you receive a cell broadcast message, it is displayed in the notification bar ([page 9](#)).

Using E-mail

Adding an E-mail Account

Contact your e-mail account provider for your e-mail configuration information.

NOTE: To add a Gmail account, see [page 90](#). Access Gmail using the Gmail application.

1. From the application tray, touch **Email > Other (POP3/IMAP4)**.
2. Enter the e-mail address and the e-mail password.
3. Touch **Save**.
4. If necessary, enter account-configuration information from your service provider.
5. Touch **Next > Save**.


Adding an Exchange ActiveSync® E-mail Account

Contact your network administrator to obtain the necessary information for your network.



For more information about Exchange ActiveSync, see [page 90](#).


1. From the application tray, touch **Email > Exchange ActiveSync**.
2. Enter your e-mail address and your e-mail password.
3. Touch **Next**.
4. If necessary, enter or correct the information.
5. Touch **Next**.
The device verifies the account settings.

Sending an E-mail Message

1. From the application tray, touch **Email > Compose**.
2. Touch the fields on the screen to enter recipients, to enter a subject, and to add attachments.
3. Touch **Message**.
4. Enter the text message.
5. Touch  for more options (optional).
6. Touch **Send**.

Viewing an E-mail Message

1. From the application tray, touch **Email**.
2. Touch  to check for new e-mail messages, if necessary.
3. Touch an e-mail message.
4. Select an option:
 - Touch  to view the location information, if available.

- Touch  to open the attachment, if available.


Deleting E-mail Messages


1. From the application tray, touch **Email > **.
2. Touch the messages to delete.
3. Touch **Delete**.

Searching for an E-mail Message


NOTE: This only searches the sender name and headers of the messages, not the message text.

1. From the application tray, touch **Email**.

TIP: To search a different folder, touch  > **View Folders**, and touch a folder, if necessary.


2. Touch  > **Search Current Folder**.
3. Enter the search text, and touch **Done**.

Changing E-mail Folders


1. From the application tray, touch **Email**.
2. Touch  > **View Folders**.
3. Touch a folder.

Setting an E-mail Signature


You can set an e-mail signature for each e-mail account you have added.

1. From the application tray, touch **Email** >  > **Manage Accounts**.
2. Touch an account.
3. Verify the **Use Signature** check box is selected.
4. Touch **Signature**.
5. Enter a signature.
6. Touch **Save**.



Changing the E-mail Account Password

1. From the Home screen, touch  > **Settings** > **Email**.
2. Select an account.
3. Touch **Account Info** > **Password**.
4. Enter the new passwords.
5. Touch **Save**.



Adding Another E-mail Account

1. From the application tray, touch **Email** >  > **Manage Accounts** > **Add New Account**.
2. Select the account type, and follow the correct instructions on [page 57](#).



Changing E-mail Accounts

1. From the application tray, touch **Email**.
2. Touch  and .

Setting the Default E-mail Account

1. From the Home screen, touch  > **Settings** > **Email** >  > **Set Default Account**.
2. Touch an account.
3. Touch **Done**.

Editing your Exchange ActiveSync Account

1. From the application tray, touch **Email** >  > **Manage Accounts** > **Exchange ActiveSync** > **Account Info**.
2. Edit the fields as necessary.
3. Touch .
4. Select an option:
 - Touch **Yes** to verify your account.
 - Touch **No** to save the changes without verifying.

Using Ciao!™

Ciao! periodically sends your location to our partner networks and downloads the most-recent location of your friends. This application only submits your location when you tell it to, unless you enable automatic updates.

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.

CAUTION


Use caution when sharing your location information with others.

Registering Your Device and Joining Ciao!

1. From the application tray, touch **Ciao!**.
2. Read and accept the on-screen messages.
3. Follow the steps to register your device.
After registering, you will receive an SMS message for verification.
4. Open the SMS message received from myGarmin.
5. Touch the link to complete the verification process.
6. Touch **OK**.
The Ciao! registration page opens.
7. Select the check box to verify that you are of legal age to use Ciao!.
8. Touch **Next**.
9. Enter a display name, and touch **Done**.
10. Touch a type of location update: **Manual** or **Automatic**.
11. Touch the link to read the terms of service for the displayed network or networks.
12. Touch **Accept**.

Your location is updated and becomes available to your friends.

Changing Your Display Name

1. From the application tray, touch **Ciao!** > **My Details** >  > **Change Name**.
2. Enter a new name.
3. Touch **Done**.

Inviting a Friend

1. From the application tray, touch **Ciao!** > **Invite**.
2. Select an option to find a friend.
3. Touch **Done**.

Your invited friend must accept the invitation before you can receive location updates from that friend.

Accepting or Declining an Invitation

1. From the application tray, touch **Ciao!**.
2. Touch the friend that sent you the invitation.
3. Touch **Accept** or **Decline**.

Sending a Location Update


From the application tray, touch **Ciao!** > **My Details** > **Send Update**.

Automatically Sending Location Updates

CAUTION

Use caution when sharing your location information with others.

By default, your location is only sent when you manually send it.

1. From the application tray, touch **Ciao!** > **My Details**.
2. Touch  > **Change Location Updates** > **Automatic** > **Done**.

Updating Your Status

1. From the application tray, touch **Ciao!** > **My Details** > **Change Status**.
2. Enter a new status message.
3. Touch **Done**.

Viewing Friends


Your list of friends displays the status of, the distance to, and the direction to your friends.

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
The location for the friend appears on a map.

Viewing All Friends on the Map

From the application tray, touch **Ciao!** > **View Map**.

Adding a Friend to Contacts

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch  > **Add to Contacts**.

Sending a Message to a Friend

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch **Message**.

Starting a Route to a Friend's Location


1. From the application tray, touch **Ciao!**.

2. Touch a friend.
3. Touch **Go!**.


Removing an Invitation


1. From the application tray, touch **Ciao!**.
2. Touch an invited friend.
3. Touch **Uninvite**.

Removing a Friend

1. From the application tray, touch **Ciao!**.
2. Touch a friend.
3. Touch the information balloon.
4. Touch  > **Remove Friend** > **Yes**.

Hiding and Revealing Your Location



- From the application tray, touch **Ciao!** >  > **Hide** > **Hide**.
Your current location is hidden from your friends.

- To stop hiding, touch **Ciao!** >  > **Stop Hiding** > **Stop Hiding**.

Viewing Ciao! Networks

1. From the application tray, touch **Ciao!**.
2. Touch  > **Privacy** >  > **Networks**.

Disabling Ciao!

1. From the application tray, touch **Ciao!**.
2. Touch  > **Privacy** >  > **Disable Ciao!** > **OK**.












All the Ciao! information stored on your device is removed. You no longer send any position updates.


To enable Ciao!, you must join Ciao! again.

Browsing the Web

1. From the application tray, touch **Browser**.
2. Touch the URL bar.
3. Enter a search term or a URL, and touch **Go**.



Using the Browser

- Touch  to refresh the current Web page.
- Touch  to stop loading the Web page.
- Touch and drag the screen to scroll the Web page.
- Touch two points near the center of the page, and drag your fingers apart to zoom in.
- Touch two points near opposite edges of the page, and drag your fingers toward the center of the page to zoom out.
- Touch links, text-entry boxes, and other interactive items to activate them.
- Touch and hold interactive items to view a menu of additional options.
- Touch  to return to the previous Web page in your history.
- Touch  to go to the next Web page in your history.
- Touch  to add this Web page to your favorites, if it is not already added.
- Touch  to remove this Web page from your favorites, if it is already added.
- Touch  to view a list of recently viewed Web sites () , favorite Web sites () , and most-viewed Web sites () .
- Touch  to view other active browser windows.

- Touch  to use the following options:
 - Touch **Go To URL** to enter a URL.
 - Touch **Refresh** to refresh the Web page.
 - Touch **Share** to send the URL in a text message or an e-mail.
 - Touch **Find on Page** to find text in the current Web page.
 - Touch **Select Text** to copy text from the current Web page to the system clipboard. Touch and drag across the text to copy. When you lift your finger, the selected text is copied to the clipboard.
 - Touch **View Downloads** to view your Download History.


Viewing Multiple Browser Windows

You can view another Web page without closing the current page by launching another browser window.


1. From the application tray, touch **Browser** >  > **New Page**.
2. Select an option:
 - Touch a Web site.
 - Touch the URL bar to enter a web address, which opens the new Web page.
3. Touch .
4. Touch an active browser window.

Saving a Web Page to Favorites


1. Open the Web page to save.
2. Touch .

When you view one of your favorite Web pages,  appears gold.

Removing a Web Site from Favorites

1. Open the Web page to remove.
2. Touch .


Opening a Favorite Web Page

1. From the application tray, touch **Browser** >  > .
2. Touch a Web page to view in the browser.


Viewing Your History

1. From the application tray, touch **Browser** >  > .
2. Touch a Web page to view in the browser.


Clearing Your Web Page History

From the Home screen, touch 
> **Settings** > **Browser** > **Clear History** > **Yes**.




Sharing a URL

1. From the application tray, touch **Browser** > .
2. Touch a category.
3. Touch and hold a Web page.
4. Touch **Share**.
5. Select an option to send the URL.


Opening a Web Site in a New Window

1. From the application tray, touch **Browser** > .
2. Touch a category.
3. Touch and hold a Web page.
4. Touch **Open in New Window**.

Deleting a Web Site from a List

1. From the application tray, touch **Browser** > .
2. Touch a category.
3. Touch .
4. Touch  next to the Web site to remove the site from the list.
5. Touch again to delete.
6. Touch **Done**.

Setting Your Browser Home Page


1. From the Home screen, touch  > **Settings** > **Browser** > **Set Home Page**.
2. Enter a URL.
3. Touch **OK**.

Downloading Files

1. From the application tray, touch **Browser**.
2. Open a Web page that contains a download link.
3. Touch the download link.


The download history page appears, and a progress bar indicates the status of the download.

TIP: Touch and hold the progress bar to cancel or pause the download.

4. Touch , and select an option, if necessary:
 - Touch **Clear All** to clear the download history. This option does not remove downloaded files from the device.
 - Touch **Pause All** to pause all in-progress downloads.

- Touch **Resume All** to resume all paused downloads.
 - Touch **Cancel All** to cancel all in-progress downloads. This option does not remove downloads that have already completed.
5. When the progress bar is full, touch the file name to view the downloaded file.

Viewing Downloads

1. From the application tray, touch **Browser** >  > **View Downloads**.
2. Touch the file.

Playing Music

Music Player File Types

The music player supports the following file types:

- MP3
- MPEG4
- WMA
- AAC/AAC+/eAAC+
- WAV
- MIDI
- OGG

All supported music files on your device are displayed in the music player.

Music Player Information

Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.

Playing a Song

You must transfer music files to your device before playing songs or creating playlists (page 92).

 


1. From the application tray, touch **Music**.
2. Select an option:
 - Touch **All Songs**.
 - Touch a category and subcategory, if necessary.

All the songs in the selected category are added to the current playlist.

3. Touch a song.
The music player plays the selected song and the following songs.

Changing the Music Player View



While playing a song, touch the following icons to change the music player view:

- Touch  to view the current playlist.
- Touch  to view the current track, cover art, and a progress slider.
- Touch  > **Browse Music Library** to browse the music library without stopping the music.

About Playlists

A playlist is a list of songs that can be saved. The current playlist appears on the playlist screen of the music player. You can also create and save playlists for future playback.





Creating a Playlist

1. From the application tray, touch **Music > Playlists > +**.
2. Enter a new name, and touch **Save**.
3. Touch the new playlist.
4. Touch .
5. Touch a category and subcategories, if necessary.
6. Select the check box next to each song to add to the playlist.
7. Touch **Add to Playlist**.
8. Repeat steps 4–7 to add additional songs.
9. Touch **Done > Save**.
10. Touch  and drag the song to a new position in the list to change the order of the playlist (optional).
11. Touch **Save**.


Playing a Playlist

1. From the application tray, touch **Music > Playlists**.
2. Touch a playlist.
3. Touch a song to begin playing the playlist.

Editing a Playlist

1. From the application tray, touch **Music > Playlists**.
2. Touch a playlist.
3. Touch  > **Edit Playlist**.
4. Select an option to edit the playlist:
 - Touch  to add songs to the playlist.
 - Touch  to remove a song from the playlist.
 - Touch and hold , and drag the song to a new position in the playlist.
5. Touch **Save**.

Searching the Music Player

1. From the application tray, touch **Music**.
2. Touch .
3. Enter all or part of the song title, album, or artist.
4. Touch **Done**.


Saving a Song as a Ringtone

1. From the music player playlist view, touch and hold the song.
2. Touch **Add to ringtone list**.

Streaming Online Music

You can stream supported music files without saving them on the device.

1. From the application tray, touch **Browser**.
2. Select an option:
 - Enter a URL.
 - Navigate to a page with a link to a supported music file.
3. Touch the music file link.

The music player launches and plays the song. The URL for the song appears.
4. If possible, touch  > **Save** to save the song.

Taking and Viewing Pictures and Videos

NOTE: If it is not already removed, remove the plastic film from the camera lens before using the camera.





Taking a Picture


1. Press the **Camera** key.
2. Use the screen as a viewfinder, and point the camera lens at the subject to photograph.
3. Press the **Camera** key halfway down, and hold the camera still.

A flashing gray box appears on the screen. The device focuses on the object inside of the box. When the camera is in focus, the box turns green and stops flashing.

4. Press the **Camera** key fully down to take the picture.

When you hear the camera click, the photo is taken and displayed for review for 3 seconds.

5. Select an option:
 - Touch  for more options, such as to set the image as the wallpaper or as a contact icon.
 - Touch  to share the image.
 - Touch  to erase the image.
 - Touch  to take a new picture.

TIP: You can also touch  to take a picture.

Taking a Picture with GPS Information

If you are receiving GPS signals, the device can assign a GPS location to the photo.




1. Press the **Camera** key.
2. Touch .

TIP: Before taking pictures with GPS information, you may need to wait a few moments for the device to acquire satellite signals.


3. Use the screen as a viewfinder, and point the camera lens at the subject to photograph.
4. Press and hold the **Camera** key, and hold the camera still.
5. Release the **Camera** key to take the picture.

When you hear the camera click, the photo is saved.


Recording a Video

1. Press the **Camera** key.
2. Touch  to select video.
3. Use the screen as a viewfinder, and point the camera lens at the subject to be recorded.
4. Touch  to begin recording.
5. Touch  to stop recording.

The video is saved automatically.

TIP: Touch  to find and view the video.

Changing the Camera and Video Settings

1. From the application tray, touch **Camera** >  > **Camera Settings**.
2. Select an option:
 - Touch **Color Effect** to select a color effect to apply to photos you take.
 - Touch **Lighting Adjustment** to select a lighting condition, or select **Automatic**.
 - Touch **Picture Resolution** to select the resolution at which to capture photos. Higher settings use more storage memory to provide better-quality photos.
 - Touch **Shutter Sound** to turn the shutter sound on or off.

- Touch **Auto Review** to turn the review page on or off. The review page displays the photo briefly after you take it.
- Touch **Video Quality** to select the resolution at which to record video.

NOTE: **Video Quality** can only be adjusted when MP4 is selected as the **Video Format**.



- Touch **Video Format** to select the video format to use when saving videos.

NOTE: Only 3GPP videos can be sent as a multimedia message.


Viewing Pictures

1. From the application tray, touch **Gallery**.
2. Touch a picture.
3. Touch the arrows to view additional photos.


Viewing a Video

1. From the application tray, touch **Gallery**.
2. Touch a video.
Videos are indicated by .
3. Touch .
4. Touch the screen to view the playback controls.

Viewing a Slideshow


1. From the application tray, touch **Gallery**.
2. Touch  > **View Slideshow**.

Sharing Pictures and Videos


1. From the application tray, touch **Gallery**.
2. Touch the picture or video.
3. Touch .
4. Select an option to share the image.


Setting Your Wallpaper

You can select and prepare a photo to serve as wallpaper.


1. From the application tray, touch **Gallery**.
2. Touch a picture.
3. Touch  > **Set As** > **Wallpaper**.
4. Touch and drag the edges of the rectangle to crop the photo.
5. Touch **Save**.

Editing Pictures and Videos

1. From the application tray, touch **Gallery**.
2. Touch a picture or video.
3. Touch .
4. Select an option:
 - Touch **Rotate** to turn the photo left or right.


- Touch **Crop**, touch and drag the edges of the rectangle to crop the photo, and touch **Save**.
A new file with the crop is created.
- Touch **More Info** >  > **Rename Picture** or **Rename Video** to rename files.

Adding a Picture to a Contact


1. From the application tray, touch **Gallery**.
2. Touch a picture.
3. Touch  > **Set As** > **Contact Photo**.
4. Touch a contact.
5. Touch and drag the edges of the square to crop the photo.
6. Touch **Save**.

Starting a Route to a Photograph or Video

You can route to photographs that have GPS location information ([page 74](#)).

1. From the application tray, touch **Gallery**.
2. Touch a picture.
3. Touch  > **Go!**.

Changing the Gallery Settings

1. From the application tray, touch **Gallery** >  > **Gallery Settings**.
2. Select an option:
 - Touch **Grouping** to select the criteria by which to group your pictures.
 - Touch **Display Size** to select the size of the picture previews.

- Touch **Sort Order** to select the order in which to sort your pictures.
- Touch **Slideshow Interval** to select the amount of time that each picture should be displayed in the slideshow.
- Touch **Slideshow Transition** to select the transition effect to use when changing pictures in the slideshow.
- Select the **Repeat Slideshow** check box to play the slideshow multiple times.
- Select the **Shuffle Slides** check box to display the slides in random order.

MPEG-4 EULA

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard (“MPEG-4 Video”) and/or (ii) decoding MPEG-4 video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal, and commercial uses and licensing may be obtained from MPEG LA, LLC. See www.MPEGLA.com.

AVC EULA




This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard (“AVC Video”) and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See www.MPEGLA.com.




Organizing Your Life

You can synchronize your phone with your computer, Google account, and Exchange account to keep your inbox, contacts, and calendar up to date in all locations (page 90).



Using the Calendar

Viewing an Appointment

1. From the application tray, touch **Calendar**.
2. Select an option, if necessary:
 - Touch  to view the current day. The number in the circle is the current day of the month.
 - Touch  to view an agenda of upcoming appointments.
 - Touch  to view appointments for today.

- Touch  to select a date on the monthly calendar.
 - Touch  or  to change the day or month.
3. Touch an appointment to view details.

Creating an Appointment


1. From the application tray, touch **Calendar**.
2. Touch .
3. Touch **Subject**, enter a subject, and touch **Done**.
4. Touch **Location**, and select an option to enter a location:
 - Enter the full address or location name, and touch **Done**.
 - Touch **Add Location**, touch the location on the map, and touch **Select this Location > Done**.
 - Touch **Add Location**, touch , find the location, and touch **Select this Location > Done**.

5. Select the duration of the appointment:
 - Select start and end times.
 - Select the **All Day** check box to create an all-day appointment.
6. Touch **Reminder**, select a reminder time, and touch **Save**, if necessary.
7. Touch **Repeat**, select how often the appointment recurs, and touch **Save**, if necessary.
8. Touch **Calendar** to select a calendar, if you have more than one calendar on the device.
9. Touch **Note** to make notes about the meeting (optional).
10. Touch **Invites** to invite people to the appointment, if necessary.

You can invite people to the meeting if you are using a Google or Exchange ActiveSync account.
11. Touch **Save**.

Starting a Route to an Appointment

If the appointment has location information, you can start a route to the location.

1. From the application tray, touch **Calendar**.
2. Touch the appointment.
3. Touch  > **Go!**.

Viewing a Document



You can view the following document types using the document viewer: Microsoft® Word, Excel®, PowerPoint®, Adobe® PDF, HTML, and plain-text files. For more information on transferring files, see [page 92](#).




1. From the application tray, touch **Document Viewer**.

TIP: To display files of a certain type, touch  > **Show By File Type**, and touch a file type.






2. Touch the document.

NOTE: You can also open a document attached to an e-mail or linked on a Web page.

3. Perform any of the following actions:
 - Touch  or  to move backward or forward one page.
 - Touch **Page**, and enter a page number.
 - Touch two points near the center of the page, and drag your fingers apart to zoom in.
 - Touch two points near opposite edges of the page, and drag your fingers toward the center of the page to zoom out.

- Touch  > **Search** to search the document.
- Touch  > **Rotate** to rotate the document 90° clockwise.
- Touch  > **Share** to send the document.

Searching a Document

1. Open the document in the Document Viewer ([page 81](#)).
2. Touch  > **Search**.
3. Enter a search term.
4. Touch .
5. Touch  or  to find the next occurrence or the previous occurrence of the search term.
6. Touch  to close the search bar.

Checking the Weather Forecast

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.




TIP: To change the units of measure, see [page 109](#).

1. From the application tray, touch **Weather**.

The current local weather conditions and a six-day forecast are displayed.

2. Touch a day to view a detailed forecast for that day.


Viewing the Forecast in Other Cities

1. From the application tray, touch **Weather** >  > **Edit Favorite Cities** > **Add City**.
2. Enter the city name.
3. Touch **Done**.
4. Touch the city.
5. Touch **Done**.
6. Touch  or  to view the forecast in your favorite cities.


Using the Clock

For information on manually changing the time or the time zone, see [page 108](#).


Adding Cities to the Time List

1. From the application tray, touch **Clock** >  > **+**.
2. Enter all or part of a city name.
3. Touch **Done**.
4. Touch the city.


Setting an Alarm

1. From the application tray, touch **Clock** >  > **Add New Alarm**.
2. Touch **Alarm Message**, enter a message for the alarm, and touch **OK**.
3. Touch **Start**, select an alarm time, and touch **Done**.
4. If necessary, touch **Repeat**, select how often the alarm should repeat, and touch **OK**.
5. Select the **Enabled** check box.
6. Touch **Ringer**, touch a ringer, and touch **Done** (optional).
7. Touch **Save**.


Managing Alarms

- Select or clear the check box next to an alarm to enable or disable the alarm.
- To delete an alarm, touch an alarm, and touch  > **Delete Alarm**.
- When the alarm sounds, touch **Snooze** to hear the alarm again in 10 minutes, or touch **Dismiss**.

Using the Stop Watch

1. From the application tray, touch **Clock** > .
2. Touch **Start** to start the timer.
3. Touch **Lap** to record the lap time and the split time (optional).
4. Touch **Stop** to stop the timer.
5. Touch the **Lap** and **Split** times to view details (optional).
6. Touch **Reset** to reset the timer (optional).


Viewing the World Map

1. From the application tray, touch **Clock** > .
The globe displays areas of daylight and night across the world.
2. Perform any of the following actions:
 - Touch and drag the globe to change the speed or the direction of rotation.
 - Touch the globe to stop the rotation.
 - When the globe is stopped, touch again to view a flat map view.
 - Touch the map to switch back to the globe view.

Using the Converter

Converting Units

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch the type of items to be converted.
4. Touch **Done**.
5. Touch a unit of measurement.
6. Touch the unit type.
7. Touch **Done**.
8. Touch a number.
9. Enter the number of units to be converted.
10. Touch **Done**.

TIP: To clear the number of units, touch  > **Clear**.

Converting Currency

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > Done**.
4. Touch a currency button.

TIP: Touch and drag the tab to quickly scroll through the currencies.

5. Touch a currency.
6. Touch **Done**.
7. Touch the amount below the currency to convert.
8. Enter the amount.
9. Touch **Done**.


Updating the Currency Rates

A data connection is required for this feature.

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > Done > Update**.

Setting Conversion Rates Manually

1. From the application tray, touch **Converter**.
2. Touch the button next to **Convert**.
3. Touch **Currency > Done**.
4. Touch a currency button.
5. Touch the currency for which you want to set the conversion rate, and touch **Done**.

6. Repeat step 5 to set the other currency, if necessary.
7. Touch  > **Custom**.
8. Touch a conversion tab to change how the currencies are converted.
9. Touch a conversion rate.
10. Enter a new conversion rate, and touch **Done**.


Checking Flight Status

A data connection is required for this feature. Your regular data usage charges apply.

1. From the application tray, touch **Flight Status**.
2. Perform a search:
 - Touch **Current Location** to search for flights in airports near your current location.

- Touch **Another City** to search for flights in airports near the city you select.

A list of airports appears. Major airports are listed first, and all other airports are sorted by distance.

3. Touch an airport.
TIP: Touch  to view the airport on the map.
4. Select an option.
5. Touch a flight.

Finding Movie Times

This service is not available in all areas. A data connection is required for this feature. Your regular data usage charges apply.

Finding a Movie by the Title

1. From the application tray, touch **Movie Times > Movies**.
2. Touch the arrows or the date to select a different date, if necessary.
3. Touch a movie.
4. Touch **Theatres**.
5. Touch a theatre.
6. Select an option.

Finding a Movie by Theatre

1. From the application tray, touch **Movie Times > Theatres**.
2. Touch a theatre.

3. Touch the arrows or the date to select a different date, if necessary.
4. Touch a movie.
5. Select an option.

Starting a Route to a Movie Theatre

After you select a movie and theatre, you can create a route to the theatre.

Touch **Go!**

Setting an Appointment for a Movie

After you select a movie and theatre, you can set an appointment for the movie time.

1. Touch  > **Remind Me**.
2. Touch a movie time.

Connecting with Other Devices

Synchronizing Your Device with Your Computer

Synchronize your device with your computer to transfer your contacts and calendar events to your device.

Downloading and Installing Garmin-Asus PC Sync

NOTE: Garmin-Asus PC Sync software is not compatible with Mac® computers.

1. Go to www.garminasus.com/pcsync.
2. Follow the on-screen instructions to download and install Garmin-Asus PC Sync software.

Synchronizing With Your Computer

1. Verify that you have downloaded and installed Garmin-Asus PC Sync software on your computer.
2. Connect the mini-USB cable to the connector on the bottom of the device (not the cradle).
3. Connect the cable to your computer. The USB Connected page opens on the device.

NOTE: If the USB Connected page does not open, open the Notification bar, and touch **USB Connected**.

4. Touch **Sync**.

Your Microsoft Outlook® contacts, calendar events, and tasks are synchronized with your device contact list and calendar.

Synchronizing Your Device with an Exchange Server

Synchronize your contacts, calendar, and e-mail with an Exchange ActiveSync account. You must have a data connection to use this feature. Contact your network administrator to obtain the necessary information for your network.


See [page 57](#) for more information about setting up an Exchange ActiveSync account.

You can select the types of data (e-mail, contacts, and calendar) to synchronize and how the device synchronizes data ([page 106](#)).

Synchronizing with a Google™ Account


You can synchronize your Google account data with the calendar,

contacts, and Google Mobile Services.

1. From the Home screen, touch  > **Settings > Accounts and Sync > Add New Account > Next.**
2. Select an option:
 - Touch **Sign In** to sign into an existing Google account. Enter your user name and password, and touch **Sign In.**
 - Touch **Create** to create a new Google account. Follow the on-screen instructions.
3. Select the types of data you want to synchronize.

Data in your Google account synchronizes automatically with the applications on your device.


Removing a Google Account

From the Home screen, touch  > **Settings > Accounts and Sync > Google > Remove Account.**

Using Bluetooth Technology


Use Bluetooth wireless technology to connect with other devices wirelessly.

Turning On Bluetooth

1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth**.
2. Select the **Bluetooth** check box.

Pairing with a Device

You can wirelessly connect to a device with Bluetooth technology.


1. Place the device to pair with in discoverable/pairing mode.
2. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth**.
3. Select the **Bluetooth** check box.
4. Select the **Discoverable** check box.
5. Touch **Scan for Devices**.

NOTE: You might have to wait a moment for the names of the devices to appear.

6. Select the device to pair with in the list.
7. Enter the passkey of the device.
8. Touch **OK**.


Connecting to a Paired Device

Before you can connect to another device, you must pair it with your device.


1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth**.
2. Touch a paired device.
3. Touch **Connect**.

Changing Your Device Name

You can change the name that identifies your device on other Bluetooth devices.


1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth**.
2. Touch **Device name**.
3. Enter a name.
4. Touch **Save**.

Disconnecting a Device

1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth**.
2. Touch the device.
3. Touch **Disconnect**.



The device is disconnected, but it remains paired with your device.

Removing a Paired Device

1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth**.
2. Select an option:
 - Touch a device, and touch **Unpair**.

- Touch  > **Clear Device List** to remove all paired devices.

Removing all Paired Devices

From the Home screen, touch  > **Settings** > **Wireless Manager** > **Bluetooth** >  > **Clear Device List** > **Yes**.

Transferring Files

You can transfer files, such as MP3s and JPEGs, to your device.

1. Insert the microSD card ([page 2](#)).
2. Connect the mini-USB cable to the connector on the bottom of the device (not the cradle).
3. Connect the cable to your computer. The USB Connected page opens.
4. Touch **File Transfer**.

NOTE: If the USB Connected page does not open, open the Notification bar, and touch **USB Connected**.

Two additional drives (volumes) appear in the list of drives on your computer. One is the internal memory of the device. The other is the memory card.

5. Copy and paste the files to be transferred into the appropriate folders in the new drives.

About File Transfer Mode

NOTICE

If you are not sure about the purpose of a file, do not delete the file. Your device memory contains important system files that should not be deleted. Be especially cautious of files located in folders entitled “Garmin.”

File transfer mode is also referred to as USB mass storage mode. Use file transfer mode to add files to the device. The computer does not need Garmin-Asus PC Sync installed to use file transfer mode.

About Picture and Video File Types


Your device supports the following file types:

- Picture: JPEG, PNG, BMP, GIF
- Video: 3GP, WMV, MP4

About Wi-Fi

Connect to the Internet using a Wi-Fi connection. You must be in a Wi-Fi coverage area (Wi-Fi hotspot) to use Wi-Fi.



Connecting to a Wi-Fi Network

1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Wi-Fi**.
2. Select the **Wi-Fi** check box.
The device searches for Wi-Fi networks.
3. If necessary, touch **Scan for Wi-Fi Networks**.

4. Touch a network.
5. Enter the network encryption key, if necessary.
6. Touch **Connect**.
7. If necessary, enter your user name and password.

Adding a Network


You can add non-broadcasting networks or other networks that your device does not automatically detect.

1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Wi-Fi**.
2. Select the **Wi-Fi** check box.
3. Touch  next to **Add Wi-Fi Network**.
4. Touch the field below **Network SSID**.
5. Enter the network SSID, and touch **Done**.
6. Touch the field below **Security**.

7. Touch a security type.
8. Enter a password, and touch **Done**.
9. Touch **Save**.


Removing a Remembered Network

After you have connected to a Wi-Fi network, the device remembers the network for future use. Remembered networks appear in the network list even when they are out of range.

1. From the Home screen, touch  > **Settings** > **Wireless Manager** > **Wi-Fi**.
2. Touch the network.
3. Touch **Forget**.

Customizing Your Device

Wireless Manager

From the Home screen, touch  > **Settings** > **Wireless Manager**.

- **Airplane Mode**—see [page 24](#).
- **Wi-Fi**—see [page 93](#).
- **Data**—see below.
NOTE: Data charges apply when the data connection is **On**.
- **Bluetooth**—see [page 91](#).
- **VPN**—allows you to configure and connect to a Virtual Private Network (VPN). Contact your network administrator for the necessary information.

Data Connection Settings

NOTICE


There may be additional charges from your service provider to use the data connection while roaming.

From the Home screen, touch  > **Settings** > **Wireless Manager** > **Data**.

- **Data Connection**—turns on the data connection.
NOTE: Data charges apply when the data connection is **On**.
- **Data Roaming**—turns on the data connection when roaming.
NOTE: There may be additional charges from your service provider to use the data connection while roaming.
- **Internet Sharing**—shares the data connection with the computer when connected with a USB cable.


- **Network Preference**—allows you to select your preferred type of network.
- **Access Point Names**—displays connected data service access points.
- **Audible Selection**—plays a tone when you touch the screen.
- **Haptic Feedback**—sets the device to vibrate when you press certain soft keys.
- **SD Card Notifications**—sets the device to vibrate when you eject or remove the memory card.

Audio Settings

From the Home screen, touch  > **Settings** > **Audio and Display**.

- **Volume Levels**—allows you to adjust the volume levels of each output.
- **Ringtones**—allows you to select a ringtone for phone calls.
- **Notifications**—sets the ringtone for notifications, such as text messages.
- **Ring Style**—sets the ring style to **Ring Only**, **Vibrate Only**, **Ring + Vibrate**, or **Silent**.
- **Audible Touch Tones**—plays a tone when you dial.

Display Settings


From the Home screen, touch  > **Settings** > **Audio and Display**.

- **Brightness**—changes the brightness of the screen. Decreasing the brightness can save battery power. **Auto Brightness** sets the brightness based on the ambient lighting.
- **Color Mode**—sets a light background (**Daytime**), a dark background (**Nighttime**), or automatically switches between the two based on the sunrise time

and sunset time for your current location (**Auto**).


- **Screen Timeout**—sets how the screen automatically shuts off if the device is inactive for the selected length of time.
- **Orientation**—allows the phone to rotate the screen display as you rotate the device.
- **Animation**—enables animations when you open or close windows.
- **Screenshot**—allows you to take a picture of the device screen.

Taking a Screenshot

1. From the Home screen, touch  > **Settings > Audio and Display > Screenshot**.
2. Press the **Camera** key to take a picture of a screen.

Screenshots are saved in the “Screenshot” folder on the device.

Phone Settings



From the Home screen, touch  > **Settings > Phone**.

- **Call Waiting**—see [page 20](#).
- **Call Forwarding**—see [page 23](#).
- **Call Barring**—see [page 23](#).
- **Caller ID**—sets a preference for sending caller ID information when you make phone calls.
- **Voice Mail Number**—sets the number to access voice mail, usually the same as your phone number
- **TTY**—enables TTY (teletypewriter) mode. This requires the use of a TTY adapter (part number 010-11371-04), available at www.garminasus.com/a50/tty_adapter.
- **Hearing Aid Mode**—optimizes the phone speaker for use with hearing aids.

- **Fixed Dialing Numbers**—enables you to set up your device so that it can only dial certain phone numbers.
- **Network Operators**—searches for local networks.

Enabling and Adding Fixed Dialing Numbers

Before you can change the Fixed Dialing Numbers (FDN) settings, you must acquire the FDN PIN for your SIM card from your service provider.

1. From the Home screen, touch  > **Settings** > **Phone** > **Fixed Dialing Numbers** > **Enable FDN**.
2. Enter the FDN PIN, and touch **Save**.
3. Touch **Manage FDN List** >  > **Add contact**.
4. Enter a name and number, and touch **Save**.

5. Enter the FDN PIN to add the contact to the FDN phone number list.

NOTE: You must enter the FDN PIN to disable FDN.

Home Screen


- **Home Screen Style**—changes the Home screen to the Classic Home or the Breeze Home, which uses panes.
- **Change Wallpaper**—see [page 10](#).

Navigation Settings


- **Voice**—sets the language used for all voice prompts and messages.
- **Traffic Service**—enables the traffic service.
- **Safe Mode**—prevents you from entering data when your vehicle is in motion.
- **Background Data**—enables

Garmin Connected Services to access data in the background.

Changing the Navigation Voice


1. From the Home screen, touch  > **Settings** > **Navigation** > **Voice**.
2. Select a language.
3. Touch **OK**.

Turning Off the Traffic Service

1. From the Home screen, touch  > **Settings** > **Navigation**.
2. Touch the **Traffic Service** check box to clear it and turn off the traffic service.

Automobile and Pedestrian Navigation Settings

You can adjust the navigation settings for Automobile (Driving) and Pedestrian (Walking) usage modes.

From the Home screen, touch  > **Settings** > **Navigation**.

- **Route Preference**—sets the

preference for calculating routes.


- **Map Detail**—sets the level of detail on the map. More detail may result in slower map drawing.
- **Map View**—sets the perspective of the Map page.
 - Track Up displays the map in two dimensions (2-D) with your direction of travel at the top.
 - North Up displays the map in 2-D with North at the top.
 - 3-D displays the map in three dimensions, with Track Up orientation (default).
- **Avoidances**—types of roads and maneuvers the device should attempt to avoid when creating routes, available for Automobile (Driving) mode only.
- **Notification Type**—sets the method for which you are notified of maneuvers in the route, available for Pedestrian (Walking) mode

only.

- **Vehicle** or **Avatar**—changes the icon to represent your position on the map.
- **Auto Dim Brightness**—automatically dims the backlight while navigating
- **Trip Log**—displays the path of your travels on the map.


Changing Public Transportation Navigation Settings

Public Transportation settings are available when cityXplorer maps are loaded.

1. From the Home screen, touch  > **Settings** > **Navigation** > **Public Transportation**.
2. Select the types of public transportation you would like to take.

Disabling Proximity Points

If you have loaded proximity points, such as safety cameras and custom POIs, you can disable them without removing them from the device.


1. From the Home screen, touch  > **Settings** > **Navigation** > **Proximity Points**.
2. Clear the check box for the type of proximity points you want to disable.

Downloading Safety Cameras



CAUTION

Garmin and ASUS are not responsible for the accuracy of, or the consequences of using, a custom point of interest (POI) or a safety camera database.

This service may be available as a paid subscription. This service is not available in all areas. A data connection is required for this feature.

1. From the Home screen, touch  > **Settings** > **Navigation** > **Download Safety Cameras**.
2. Select a region or regions.
3. Touch **Download**.


Viewing Map Information

From the Home screen, touch  > **Settings** > **Navigation** >  > **Map Info**.

A list of installed maps appears.

NOTE: Select or clear the check box next to a map to enable or disable the map.

E-mail Account Settings


From the Home screen, touch  > **Settings** > **Email**, and touch an account.

- **Account Info**—contains information about this account, such as the password ([page 59](#)).
- **Email Check Interval**—sets the

frequency for checking for new e-mail.


- **Email Sync Back Days**—sets the length of time to synchronize e-mail.
- **Calendar Sync Back Days**—sets the length of time to synchronize the calendar.
- **Email Notifications**—sets how you are notified when you receive an e-mail.
- **Select Ringtone**
- **Vibrate**
- **Use Signature**
- **Signature**—[page 59](#).

Contacts Settings

From the Home screen, touch  > **Settings** > **Contacts**.

- **Sort Contacts By**—sorts contacts by first or last name.
- **Hide Contacts with No Phone**—hides contacts that do not have a phone number.


Calendar Settings

From the Home screen, touch  > **Settings** > **Calendar**.

- **Set Default Reminder Time**—sets the number of minutes before an appointment that the device should notify you of the appointment.
- **Reminder Style**—sets how the device notifies you of an upcoming appointment.
- **Set Reminder Ringtone**—sets the ringtone that notifies you of an upcoming appointment.

- **Set Snooze Time**—sets the amount of time to snooze when you touch **Snooze** on a calendar notification.
- **Vibrate**—sets whether the device vibrates to notify you of an upcoming appointment.

Messaging Settings


From the Home screen, touch  > **Settings** > **Messaging**.

- **Delivery Reports**—requests a delivery report for each SMS and MMS message you send.
- **Manage SIM card messages**—allows you to copy or delete SMS messages stored on your SIM card.
- **SMSC**—allows you to change the SMSC (short message service center) number, if necessary.
- **Read Reports**—requests a read report for each MMS message you send.

- **Auto-retrieve**—retrieves MMS messages automatically when you are not roaming.
- **Roaming Auto-retrieve**—retrieves MMS messages automatically when you are roaming.
- **Creation Mode**—limits the size and type of MMS message attachments for compatibility with all service providers.
- **Notifications**—displays a notification in the status bar when you receive a message.
- **Select Ringtone**—sets a ringtone to play when you receive a message.
- **Vibrate**—sets how the device vibrates when you receive a message.
- **Cell Broadcast Service**—[page 56](#).

Browser Settings

General Browser Settings


From the Home screen, touch  > **Settings** > **Browser**.

- **Set Home Page**—sets the browser home page ([page 68](#)).
- **Block Pop-ups**—blocks pop-up windows while browsing.
- **Auto-fit Web Pages**—resizes Web pages to fit the screen.
- **Load Images**—allows you to view images on Web pages.
- **Set Text Size**—sets the size of text that the browser uses to display Web pages.
- **Enable JavaScript**—allows JavaScript.
- **Map URL Handling**—adjusts how map URLs are opened:
 - **Enable Support**—allows map URLs to be opened in Garmin

maps.


- **Set as Default**—opens map URLs in Garmin maps by default.

Browser Privacy Settings

From the Home screen, touch  > **Settings** > **Browser**.

- **Accept Cookies**
- **Remember Form Data**
- **Clear Cache**
- **Clear History**
- **Clear Cookies**
- **Clear Form Data**

Browser Security Settings

From the Home screen, touch  > **Settings** > **Browser**.

- **Remember Passwords**—saves user names and passwords for Web sites.
- **Show Warnings**—displays a

warning when the browser detects a problem with the security of a Web site.

- **Clear Passwords**—clears saved password information.

Quick Search Settings



From the Home screen, touch  > **Settings** > **Quick Search**.

- **Searchable Items**—sets what is searched when using the Search widget.
- **Clear Search Shortcuts**—clears the shortcuts to recently selected search results.
- **Google Search Settings**—changes the search settings for Google Mobile Services.

Managing Applications

NOTICE


Cleared data cannot be restored.

1. From the Home screen, touch  > **Settings** > **Application Management** > **Manage Applications**.
A list of applications appears, showing the amount of memory used for each application.
2. Touch  to sort or filter the list (optional).
3. Touch an application to view details, including storage size, cache size, defaults, and permissions.
4. Select one or more options:
 - Touch **Uninstall** to remove the application from your device, if available.


- Touch **Clear data** to clear stored data associated with the application.
- Touch **Clear cache** to clear cached data for the application.
- Touch **Clear defaults** to clear application defaults.
- Touch **Force Stop** to close the application.

Allowing the Installation of Applications

You can allow the installation of applications from outside the Android™ Market.

1. From the Home screen, touch  > **Settings** > **Application Management**.
2. Select the **Unknown Sources** check box.


Accounts and Sync Settings

From the Home screen, touch  > **Settings > Accounts and Sync**.

- **Background Data**—allows applications, such as e-mail, to send and receive data at any time.
- **Auto-sync**—allows applications, such as e-mail, to synchronize with the server automatically.
- Select an account to change the sync settings.

For information about e-mail account settings, see [page 101](#).

Security and Location Settings

From the Home screen, touch  > **Settings > Security and Location**.


- **My Parking Spot**—saves your parking spot when you remove the

device from the mount while power is applied to it.

- **Use Wireless Networks**—determines your location using Wi-Fi and mobile networks.
- **Use GPS Satellites**—determines your location using GPS satellites.

Using a Pattern to Unlock the Screen

When the screen-unlock pattern is turned on, you must enter a pattern to unlock the device. You can still use the device to contact emergency services without using the screen-unlock pattern.


1. From the Home screen, touch  > **Settings > Security and Location > Set Unlock Pattern**.
2. Follow the on-screen instructions to create an unlock pattern.

If you forget your pattern, contact Product Support. Your device can be

unlocked, but all personal information is erased in the process. See [page 110](#) for more information.


Locking the SIM Card

Use these settings to require a PIN to enable all non-emergency features of the device. You can still use the device to contact emergency services without a PIN. You can remove the SIM card to use the non-telephone features of the device.

1. From the Home screen, touch  > **Settings > Security and Location > Set up SIM Card Lock > Use SIM Card Lock.**
2. Enter a PIN, and touch **OK.**


If you forget your SIM PIN, contact your service provider to obtain a Personal Unblocking Key (PUK).

Viewing Passwords as you Type Them

1. From the Home screen, touch  > **Settings > Security and Location.**
2. Select the **Visible Passwords** check box.


Setting a Credential Storage Password

You can store security credentials, such as passwords and certificates, for quick access.


1. From the Home screen, touch  > **Settings > Security and Location > Set Password.**
2. Enter a password, and touch **OK.**
Use Secure Credentials is automatically selected.

Changing the Text Language

NOTE: Changing the text language does not change the language of map data, such as street names or user-entered data.


1. From the Home screen, touch  > **Settings** > **Language and Keyboard** > **Language**.
2. Touch a language for all on-screen text.

Keyboard Settings

From the Home screen, touch  > **Settings** > **Language and Keyboard**.


- **Text Completion**—displays suggested words as you enter text.
- **Auto Capitalization**—automatically capitalizes the first word in a field.
- **Enable Keyboards**—enables keyboards for different languages.

Date and Time Settings

From the Home screen, touch  > **Settings** > **Date and Time**.

- **Automatic**—uses the network settings for the date and time.
If you clear the **Automatic** check box, you can set the following items:
 - **Set Date**—allows you to set the date manually.
 - **Set Time**—allows you to set the time manually.
 - **Set Time Zone**—allows you to select a time zone manually.
- **Date Format**—sets the date format.
- **Time Format**—sets the time format to **12-Hour**, **24-Hour**, or **UTC**.

Units Settings

From the Home screen, touch  > **Settings** > **Units**.

- **Distance**—units of measure for distance.
- **Temperature**—units of measure for temperature.
- **Coordinates**—units of measure for the coordinates format.

Privacy Settings

From the Home screen, touch  > **Settings** > **Privacy**.

NOTE: Sharing your location information and feedback requires the use of your data plan, and any associated charges would apply.

- **Share with Google**—allows Google applications to use location information.
- **Connected Services Feedback**—allows Garmin-Asus to collect your speed, your direction, and your location information and share it, anonymously, and in a way that does not personally identify you, with strategic partners and service providers for the purpose of enhancing the quality of the content you receive on your device.

Clearing All User Data

NOTICE

This process restores all settings to factory defaults and removes all user data.

Any items that you have saved on your device, such as Saved Locations, photos, and contacts, are erased.


Any applications you have purchased and downloaded are removed. You should be able to download and install the applications again.

Map data is not erased.


Cleared data cannot be restored.

From the Home screen, touch  > **Settings** > **Privacy** > **Master Clear**.

Changing the Storage Settings



1. From the Home screen, touch  > **Settings** > **Storage**.
2. Scroll to view the total space and available space for each storage type.
3. Touch **Default Storage**.
4. Select **Internal Storage** or **SD Card**.
5. Touch **Save**.

Viewing Software Information

1. From the Home screen, touch  > **Settings** > **About**.
2. Touch an item.


Appendix

About Satellite Signals

The GPS status icon appears in the upper-right corner of the status bar to indicate the GPS signal strength. When at least one of the lines is green, your device has acquired satellite signals. The more green lines , the stronger the GPS signal. If the device is not receiving GPS signals,  appears.

For troubleshooting information about acquiring satellites, see [page 117](#).

Viewing Detailed GPS Signal Information

1. From the application tray, touch **Where Am I?**
2. Touch the information balloon.
3. Touch  > **Satellite Info**.


About Connected Services

Use connected services to search for location-relevant information such as traffic, weather data, and flight status.



These services are not available in all areas. A data connection is required for these services. Your regular data usage charges apply.

Additional services may be available with a subscription. For more information, go to www.garminasus.com.

Battery Information

The  icon in the status bar indicates the status of the internal battery. To increase the accuracy of the battery gauge, fully discharge the battery and then fully charge it. Do not unplug the device until it is totally charged.

Maximizing the Battery Life

- From the Home screen, touch  > **Settings** > **Audio and Display** > **Brightness** to turn down the backlight.
- From the Home screen, touch  > **Settings** > **Display** > **Screen Timeout** to reduce the timeout length.
- Do not leave your device in direct sunlight.
- Avoid prolonged exposure to excessive heat.

Replacing the Battery

CAUTION

Do not use a sharp object to remove the battery. A sharp object may puncture the battery, which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

Only use the correct battery type. Using an incorrect battery may present a risk of explosion.

NOTICE

To avoid losing your customized settings, replace the battery within five minutes of removing it from your device.

Contact your local waste disposal department for information on properly disposing of the battery and device.

If you need to replace the battery in the device, use an SBP-20 lithium-ion battery. For more information on purchasing a replacement battery, go to www.garminasus.com.

Mounting on Your Dashboard

NOTICE

The **permanent** mounting adhesive is extremely difficult to remove after it is installed.

A mounting disk is included in some device packages. Use the mounting disk to mount your device to the dashboard and comply with certain state and local regulations.

1. Clean and dry the dashboard where you are placing the disk.
2. Remove the backing from the adhesive on the bottom of the disk.

3. Place the disk on the dashboard.
4. Remove the clear plastic cover from the top of the disk.
5. Place the suction cup mount on top of the disk.
6. Flip the lever down (toward the disk).

Removing the Device, Cradle, and Mount

Removing the device from the Cradle

1. Press up on the tab on the top of the cradle.
2. Tilt the device forward.

Removing the Cradle from the Mount

1. Turn the cradle to the right or left.
2. Apply pressure until the socket on the cradle releases the ball on the mount.

Removing the Suction Cup Mount from the Windshield

1. Flip the lever on the suction cup mount toward you.
2. Pull the tab on the suction cup toward you.

Resetting the Device

CAUTION

Do not use a sharp object to remove the battery. A sharp object may puncture the battery which may present a risk of fire, chemical burn, electrolyte leak, and/or injury.

If the device stops functioning, you may need to reset the device.

1. Turn off the device, and then turn on the device.
2. If necessary, remove and replace the battery ([page 112](#)).

The device should restart and operate normally.

Caring for Your Device

- Avoid dropping your device and operating it in high-shock and high-vibration environments.
- Do not expose the device to water. Contact with water can cause this device to malfunction.
- Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Never use a hard or sharp object to operate the touchscreen, or damage may result.
- To help avoid theft, remove the device and mount from sight when not in use.
- Remove the residue on the windshield left by the suction cup.

Specifications

Physical size (W × H × D):

2.28 × 4.33 × 0.54 in.
(58 × 110 × 13.8 mm)

Weight: 4.61 oz. (130.6 g)

Display: 3.2 in. diagonal, 320 × 480 pixels; HVGA display with white backlight and touchscreen

Case: IP51 (Not waterproof)

Operating temperature range:

from 5°F to 104°F
(from -15°C to 40°C)

Storing temperature Range:

from -4°F to 158°F
(from -20°C to 70°C)

Battery charging temperature range:

from 32°F to 140°F
(from 0°C to 60°C)

Power connector: Mini-USB for power and computer

Battery type: User-replaceable
1150 mAh lithium-ion battery

Battery life: 9–11 hours talk time,
530–660 hours standby time,
depending on usage and settings

Charge time: Approximately 3 hours

Power input: AC input using mini-USB connector and AC charger,
or DC input using vehicle power cable

Usage: 3 W max.

GPS receiver: High-sensitivity

Acquisition times*:

Warm: <1 sec.

Cold: <38 sec.

Factory Reset: <45 sec.

*Average acquisition times for a stationary receiver with a clear view of the sky.

Frequency band: 3G Bands I and IV;
2G (GSM) 850/900/1800/1900

Other connectivity: Bluetooth
2.0+EDR; 802.11 b/g (Wi-Fi);
mini-USB 2.0

Platform: Android™ platform



Camera: 3.0 MP camera

Audio out: mini-USB

Computer interface: Plug-and-play
USB mass storage

Data storage: Internal memory and
optional removable microSD
card. Data stored indefinitely.

Troubleshooting

Issue/Question	Solution
The device is not acquiring satellite signals.	From the Home screen, touch  > Settings > Security and Location . Select the Use GPS Satellites check box.
	Ensure that the GPS has enough time to initialize. When the GPS is turned on for the first time, it may take a few minutes to initialize.
The device will not turn on.	Charge the battery (page 3 and page 4).
	Replace the battery (page 112).
The device will not charge.	Replace the fuse in the vehicle power cable.
	As a safety precaution in high-temperature environments, the device will suspend charging and use battery power. If the device is mounted in a vehicle, remove the device from the mount and place it out of direct sunlight.
I cannot place a phone call.	The call function may have been suspended because of low battery power. In low-battery situations, you might be prompted to turn off the call functions. You can still navigate in these situations.
	From the Home screen, touch  > Settings > Wireless Manager . Clear the Airplane Mode check box.
Do not delete necessary files.	In mass storage mode, do not delete or format the original directories, such as Garmin and Documents. Do not delete files for which you do not know the purpose.

How can I improve the cell signal?	Step outside your vehicle.
	Use a hands-free headset.
	Move the device outside, to an open area.
	Walk to a window to improve indoor reception.
	Avoid windows with reflective metal film.
	Move to a higher elevation.
	Move the device away from electronic equipment.

Index

Symbols

- 12-hour time format 108
- 2-D map view 99
- 2G 96
- 3-D map view 99
- 3G 96
- 3GP 93

A

- additional maps i
- address, finding 36
- alarm, setting 84
- answering a call 19
- applications
 - managing 105
- appointment
 - adding 80
 - routing to 81
 - saving local event
 - as 38, 88
 - setting movie time
 - as 88
 - settings 102

audio

- notifications 9
 - ringtone 9
 - volume 6
- audio out 116
- avoiding
 - road closures 50
 - road features 46, 99
 - traffic 48

B

- backlight
 - brightness 96
- battery
 - charge 3
 - information 112
 - removing 112
- Bluetooth technology
 - 91–92
- BMP 93
- brightness 96
- browsing the map 42
- browsing the Web
 - 65–69, 103
- cookies 104

- history 104
- home page 68
- security 104
- settings 103–104

bus 100

C

- calendar 80–81
 - settings 102
- call 18, 21, 22, 25
 - ending 19
 - forwarding 97
 - history 21
 - options 18
 - waiting 20, 97
- caller ID 97
- calls
 - barring 23
 - forwarding 23
- camera 74
 - screen shot 97
- care information 114
- cell broadcast 56

- Ciao! 61–64
 - accepting invite 62
 - hiding location 64
 - inviting 62
 - joining 61
 - registering 61
 - removing a friend 64
 - status 63
 - viewing friends 63
 - clock 83–85, 108
 - setting 108
 - compass 49
 - calibrating 50
 - computer
 - connecting to 89
 - synchronizing with 89
 - conference call 22, 23
 - connected services 111
 - currency converter
 - update 86
 - flight status 87
 - gas prices 38
 - local business
 - search 36
 - movie times 88
 - safety cameras 100
 - subscription 111
 - traffic 46
 - upcoming events 37
 - weather 83
 - white pages 39
- contacts 25–29
 - adding 25
 - assigning location 27
 - deleting 26
 - editing 26
 - managing SIM 28–29
 - navigating to 28
 - ringtone 27
 - saving 21
 - setting picture for 26, 74, 77
 - shortcut menu 26
 - converting
 - currency 86
 - units 85
 - cookies 104
 - coordinates 40
 - cradle 4, 5
- D**
 - data connection
 - settings 95–97
 - share 95
 - date, setting 108
 - deleting
 - all user data 110
 - call history 22
 - recently found
 - locations 37
 - detour 50
 - device hardware
 - keys 6
 - digital elevation map 43
 - display settings 96
 - document
 - searching 82
 - transferring 92
 - viewing 81–82
 - downloading files 69
 - driving route 43, 44–46, 50
 - settings 99–101, 100–101

E

- e-mail 57–60, 58
 - signature 59
- emergency assistance 35
- emergency mode 106, 107
- entering data 13
- Exchange ActiveSync Server
 - sync with 90

F

- file
 - downloading 69
 - media gallery 93
 - music 70
 - transferring 92
- finding locations.
 - See searching for locations
- fixed dialing 98
- flight mode 24
- flight status 87
- folders 10
- forwarding a message 55
- fuel prices 38

G

- gallery 93–94
- gas prices 38
- geocaching 40
- geographic coordinates 40
- globe view 43
- go home 35
- Google account
 - sync with 90
- Google search settings 104

H

- headphones 116
- headset 15, 116
- hearing aid 97
- Help file i
- history 104
- holding a phone call 19
- home location 35
- home screen
 - customizing 10–11
 - folders 11–17

I

- ignoring a call 19
- Internet

- connection icon 16
- Internet sharing 95

J

- JPEG 93

K

- keyboard 13, 108
- keys on the device 6

L

- language
 - keyboard 108–110
 - text 108–110
- limited dialing 98
- lithium-ion battery 112
- local events 37
- local search 36
- location information 31
 - changing update method 63
- location messages 54
- locking the device 14
 - settings 107
- locking the screen 14

lock the screen
 automatically 15

M

making a phone call 18

map

- additional i
- browse 42
- moving 42
- settings 98–99
- zoom 42

map contours 43

map detail 99

MapSource i

maximum speed,
 resetting 46, 50

media gallery 93–94

messages (SMS/MMS)

- new 53
- read 54

messaging

- forward 55

mini-USB 1

MMS 53

money exchange rates 86

mounting

- removing from
 mount 113

movie times 88

MP4 93

mute 18

mute ringer 12

N

navigation. *See* route
 settings 98–99

- voice 98, 99

network type 96

O

odometer 46, 50

on-screen keyboard 13

P

Panoramio photos 38

parking spot 35

phone 18–24

- turn off (airplane) 24

picture

- file types 93
- take 74

 view 76

playing music 70

PNG 93

public transportation
 99, 100

R

receiving a call
 19

recently found locations 37

registering 61

removing the mount 113

resetting 114

 device 114

 maximum speed 46, 50

 odometer 46, 50

 trip computer 46, 50

restrict dialing 98

reverse lookup 22

ringer mode 96

ring style 96

ringtone

 for a contact 27

 for appointments 102

 for calls 9, 96

- for e-mail 101
- for messages 103
- for notifications 96
- save song as 73
- rotating screen 12
- route
 - add points to 51
 - add stops 51
 - all turns in 45
 - details 45
 - edit 51, 52
 - home 35
 - navigate saved route 52
 - next turn 45
 - plan 51–52
 - starting driving route 44
 - starting walking route 48
 - stop 50, 51
 - take saved route 52
 - to a Ciao friend's location 63
 - to a contact 28
 - to a found location 31
 - to a friend's location 63
 - to a location 31
 - to a movie 88
 - to an appointment 81
 - to an upcoming event 37, 88
 - to a photograph location 78
 - to your home 35
 - to your parking spot 35
 - turn list 45
 - view on map 45
- S**
- safe mode 98
- safety cameras 100–110
- saving locations 32
- saving locations to Favorites 32
- saving your current location 32
- screen
 - brightness 96
 - lock 14
 - orient 12
 - rotate 12
 - use the touchscreen 13
- screen shot 97
- screen timeout 15
- searching for locations 30
 - address 36
 - change the search area 32
 - favorites 32
 - item on the map 42
 - navigate to a contact 28
 - points of interest 30
 - recently found 37
 - spell name 31
- security settings 106–107, 108–109
- sending
 - e-mail 58
 - found location 34
 - SMS 53
 - text 53
 - your location 54

- setting picture as
 - contact icon 26, 77
 - wallpaper 77
- settings 95–110
- sharing
 - documents 82
 - feedback 109
 - found location 34
 - picture 74
 - pictures and videos 76
 - URL 66, 68
 - your location 34
- sharing Internet
 - connection 95
- shortcut menu for
 - contacts 26–29
- shortcuts 10
- signature 59
- silence 19
- silent 12, 96
- SIM card
 - copy contacts 28
- slideshow 76
- SMS 53–60
 - cell broadcast 56
- software
 - update i
 - view information 110
- speakerphone 18
- specifications 115
- spelling the location 31
- status bar 16
- stop watch 84
- storage
 - available 110
 - default 110
- storing the device 114
- streaming music 73
- synchronizing 89
 - with a Google account 90
 - with computer 89
 - with Exchange Server 90
- T**
 - teletypewriter 97
 - text completion 14, 108
 - text message 53–60
 - theft, ways to avoid 114
- time, setting 108
- traffic 46–52
 - avoid 48–52
 - icon 47
- train 100
- transfer files 92–93
- trip computer 46, 50
- trip log 52
 - clearing 52
- TTY 97
- U**
 - underground transit 100
 - units of measure 109
 - updating
 - maps i
 - software i
 - user data, deleting 110
- V**
 - vehicle routes. *See* driving route
 - vibrating 12
 - for alarm 84
 - for appointments 102

- for e-mail
 - messages 101
- for messages 103
- for phone call 96

video

- file types 93
- recording 75, 75–79

voice mail 19, 20

volume 12

VPN 95

W

walking routes

- settings 99

wallpaper 10, 74, 77

weather 83

Where Am I? 35

Where To? pane 8

white pages 39

Wi-Fi 93–94

WMV 93

Z

zoom 13, 42, 43, 65, 82



**For the latest free software updates (excluding map data) throughout the life of
your device, go to
www.garminasus.com.**

© 2010 Garmin Ltd. or its subsidiaries and ASUSTeK Computer Inc.

For model 0100084610

September 2010

Part Number 190-01292-00 Rev. A

Printed in China